


CITROEN PICASSO DASH



USE CABLE C4, REMOVE BACK PLASTIC COVER FROM DASH, CAREFULLY, DON'T TOUCH SCREENS AT ANY TIME, THEN LOCATE EPROM AND CLIP IT CHECKING **PIN 1** AS SHOWN ON PHOTOS BELOW:

VERSION TO 2003:

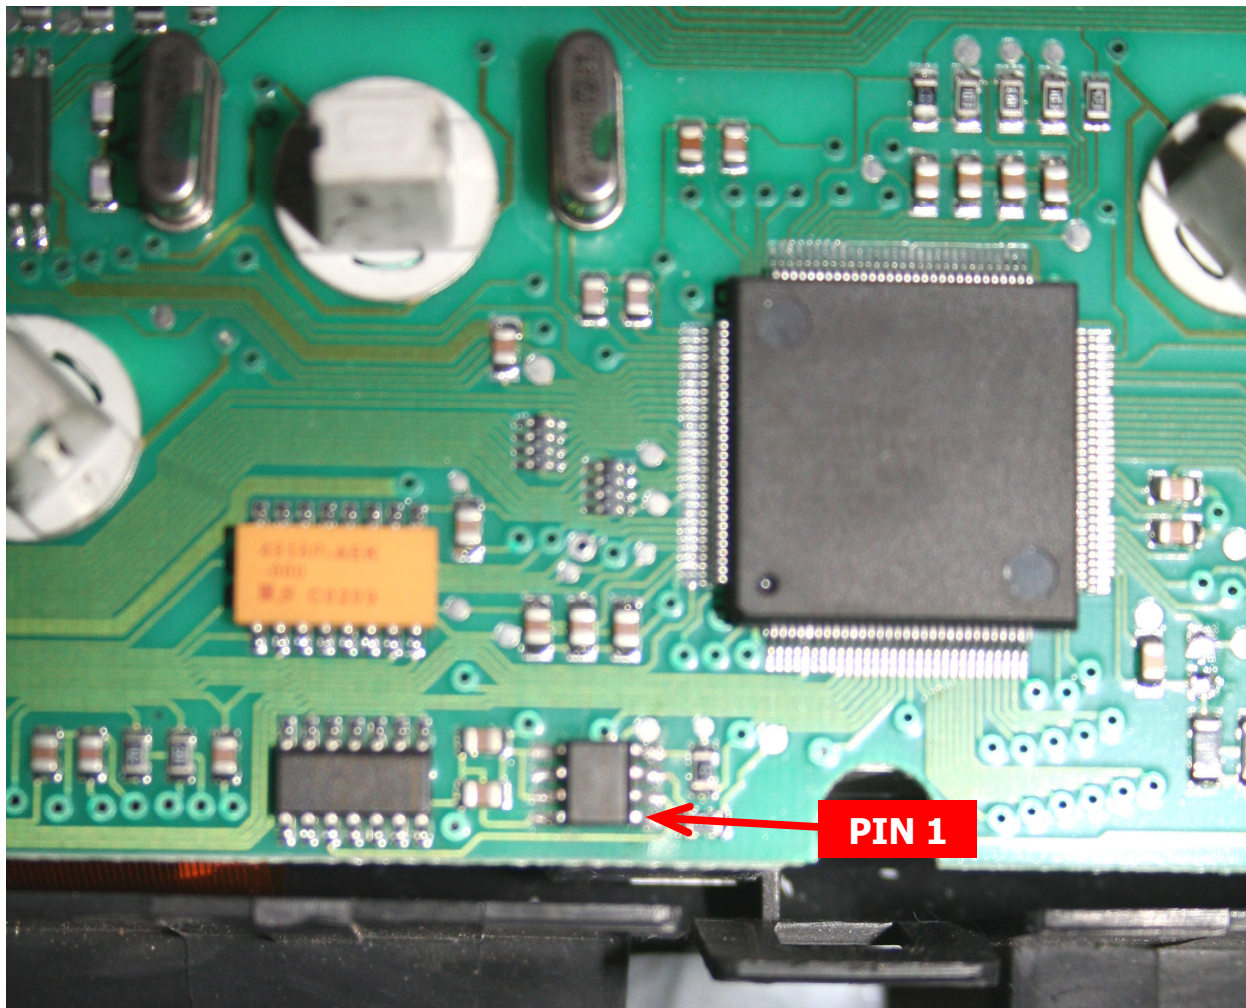

VERSION FROM 2003:

