LAND ROVER FREELANDER FROM 2008

THESE CARS HAVE A <u>VERY SPECIAL PROCEDURE</u>, PLEASE FOLLOW THESE INSTRUCTIONS; <u>DON'T TRY TO TAKE SHORT CUTS!</u>

- PREPARATION STEPS:
 - 1. Write old milleage on a paper and remove key from ignition.
 - 2. OPEN BOTH BONNET AND BOOT/TRUNK.
 - 3. REMOVE COVERS FROM BATTERY AND FUSE BOX:



4. DISCONNECT BATTERY TERMINAL



5. EXTRACT THREE FUSES AS SHOWN IN PICTURE, FUSE COLOURS MAY VARY.



6. In the Boot/Trunk on left hand side of the car, remove a cover to reveal 3 or 4 fuse boxes:



7. REMOVE COVER FROM THE WHITE FUSE BOX, AND EXTRACT THE 4 FUSES AS SHOWN IN PICTURE.



• DASHBOARD:



Use cable C4, open back cover from dash, locate eeprom M35080 memory and clip it checking Pin 1 as photo below shows to us, remember to set voltage at 4.5~V for a perfect working:



• VECAM-BCM:

1. REMOVE GLOVES STORAGE.



2. DISCONNECT WHITE BOX (CEM) AND OPEN IT.




3. Use cable C7, after locating points on the botton main board, solder cable leads concordance with its NUMBER-COLOUR and VERSION, ENIGMA will show 2 pins failure, go ahead...

VERSION 1:



VERSION 2:

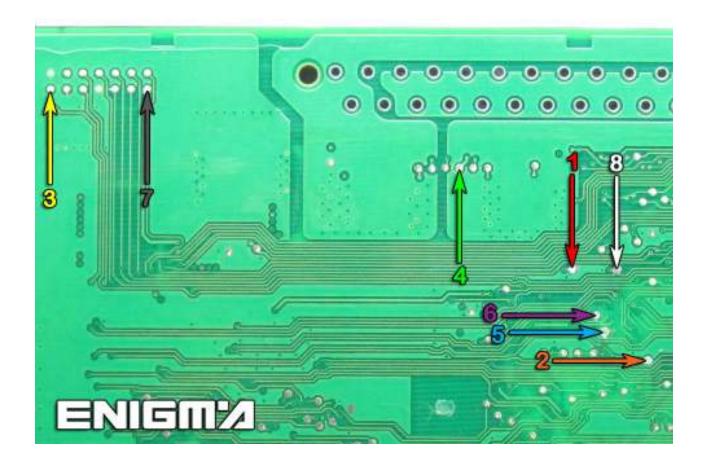

BEST TO MAKE BACKUPS FROM BOTH MEMORIES.

i i PROGRAM SAME VALUE ON DASH AND VECAM!!!

• FINALIZATION:

THE FOLLOWING INSTRUCTIONS ARE VERY IMPORTANT FOLLOW CAREFULLY OR YOU WILL HAVE TO REPEAT THE WHOLE PROCESS!

- 1. RECONNECT THE INSTRUMENT CLUSTER AND THE VECAM BCM INTO THE VEHICLE.
- 2. RECONNECT THE BATTERY TERMINAL.
- 3. Insert the ignition key and press the "Start" button, whilst foot brake is pressed (Auto) or clutch is pressed (Manual).
- 4. CLUSTER WILL LIGHT UP AND MOST WARNING LAMPS WILL GO OUT AND THE ENGINE WILL NOT START (ABS/DSTC TROUBLE CODES WILL REMAIN ON LCD DISPLAY, DON'T WORRY ABOUT THIS).

5. DO NOT POWER OFF OR ATTEMPT TO REMOVE KEYS!

- 6. Now re-insert the four fuses in the BOOT/TRUNK FIRST AND THEN THREE FUSES IN THE BONNET/HOOD.
- 7. REPLACE THE UPPER PART OF THE FUSE BOX AND BOLT IT DOWN.
- 8. Ensure bonnet/boot and all doors are closed when you are in the car.
- 9. PRESS THE "START" BUTTON WITH BRAKE OR CLUTCH PRESSED DEPENDANT ON THE GEARBOX TYPE, NOW THE ENGINE WILL START.
- 10. DO NOT POWER OFF THE ENGINE AND DRIVE FOR AT LEAST 2KM (
 TROUBLE CODES WILL STILL BE VISIBLE ON LCD SCREEN WHILST YOU
 ARE DRIVING, DRIVE CAREFULLY!)
- 11. AFTER 2KM OF DRIVING, POWER OFF, RE-INSERT KEY AND START THE CAR, DRIVE FOR AT LEAST 200M IN ORDER TO CLEAR THE TROUBLE CODES FROM THE LCD SCREEN, NOW THE LCD WILL JUST SHOW FOUR DASHES (CLOCK DISPLAY) ON RIGHT HAND SCREEN WHERE TROUBLE CODES WERE PREVIOUSLY.
- 12. CLEAR ANY UNSEEN CODES WITH A DIAGNOSTIC TOOL AND JOB DONE!