

LEXUS GS300

ENIGMA



USE CABLE C4, OPEN BACK SIDE FROM DASH, CAREFULLY, THEN LOCATE EPROM 93C46, AND CLIP IT CHECKING **PIN 1** AS SHOWN OF BELOW PHOTO:

