

MERCEDES BENZ SLK-W171 DASH



USE CABLE C4, REMOVE BACK PLASTIC COVER. THEN LOCATE EPROM MEMORY 24C16, CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

