

SUZUKI WAGON DASH NEC



USE CABLE C13 ALWAYS CONNECTED TO A1 ADAPTER. OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, ON MAIN BOARD CONNECT OR SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN OF BELOW PHOTO:

