

CITROEN PICASSO DASH TO 2003

ENIGMA



USE CABLE C4, OPEN BACK PART OF DASH, CAREFULLY, DON'T TOUCH SCREENS AT ANY TIME, THEN LOCATE EPROM 93C66 MEMORY, AND CLIP IT CHECKING PIN 1 AS SHOWN OF BELOW PHOTO:

