

# VOLVO S70-V70 C56



USE CABLE C4, REMOVE BACK PLASTIC COVER OF DASH, CAREFULLY, THEN PULL OUT MAIN BOARD, LOCATE EPROM 93C56, SOMETIMES NEED TO BE CLEANED, AND CLIP IT CHECKING **PIN 1** AS SHOWN OF BELOW PHOTO:

