

YAMAHA FAZER 300



USE CABLE C4, OPEN CAREFULLY ALL DASH, THEN LOCATE EPROM MEMORY, AND CLIP IT CHECKING **PIN 1** AS SHOWN ON BELOW PHOTO:

