


# Audi TT 2007-2009 dash pinouts

---


## 32-pin connector, blue (Midline)

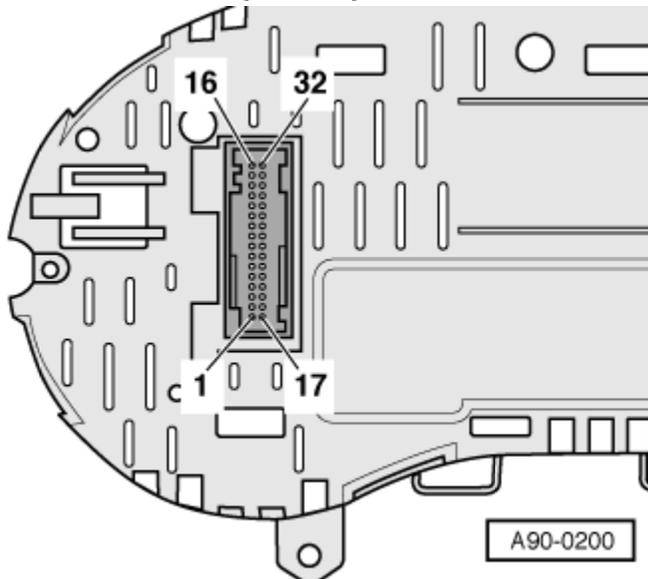

1. Terminal 30
2. Terminal 30
3. Terminal 31
4. Terminal 31
5. CAN bus (diagnosis) wake-up wire
6. Fuel gauge sender 2, signal (quattro)
7. Brake pad
8. Oil level
9. Not used
10. Not used
11. Not used
12. Not used
13. Not used
14. Brake fluid low
15. Oil pressure switch
16. Not used
17. Not used
18. Terminal 30
19. Terminal 31
20. Not used
21. Coolant level low
22. Not used
23. Not used
24. Ambient temperature
25. Fuel gauge sender 1, signal
26. Fuel gauge sender 2, overall resistance (quattro)

- 27. Fuel gauge sender 1, overall resistance
- 28. Sender earth
- 29. CAN bus High (diagnosis)
- 30. CAN bus Low (diagnosis)
- 31. Transponder Rx
- 32. Transponder Tx

### 32-pin connector, blue (Highline)

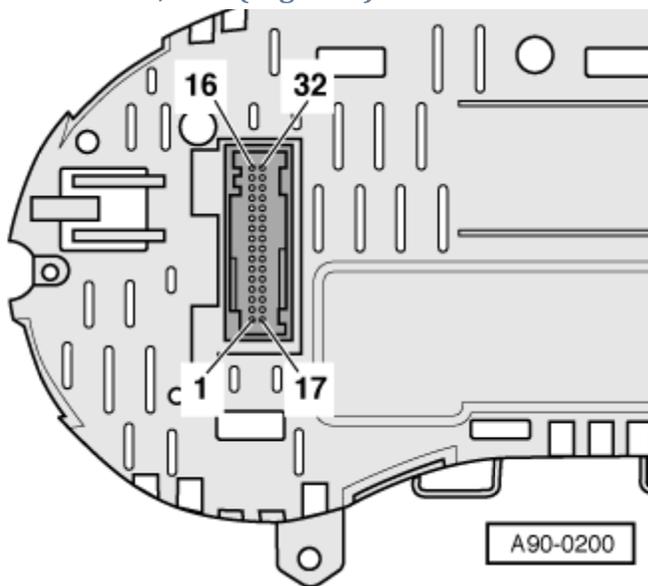

- 1. Terminal 30
- 2. Terminal 30
- 3. Terminal 31
- 4. Terminal 31
- 5. CAN bus (diagnosis) wake-up wire
- 6. Fuel gauge sender 2, signal (quattro)
- 7. Brake pad
- 8. Oil level
- 9. Radio-controlled clock signal
- 10. Radio clock 5 V
- 11. Not used
- 12. Not used
- 13. Not used
- 14. Brake fluid low
- 15. Oil pressure switch
- 16. Not used
- 17. Terminal 58d
- 18. Terminal 30
- 19. Terminal 31
- 20. Washer fluid low
- 21. Coolant level low
- 22. Not used

23. Not used
24. Ambient temperature
25. Fuel gauge sender 1, signal
26. Fuel gauge sender 2, overall resistance (quattro)
27. Fuel gauge sender 1, overall resistance
28. Sender earth
29. CAN bus High (diagnosis)
30. CAN bus Low (diagnosis)
31. Transponder Rx
32. Transponder Tx