

# Reset Engine Oil Replacement Reminder Light

2006 Model Year Toyotas

<b>Model</b>	<b>Reset Reminder Light Procedure</b>
<b>'06 Avalon</b>  Pages 153 & 154	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the engine off with the odometer reading shown.</li><li>2. Turn the ignition switch is set at ON while holding down the trip meter reset knob.</li></ol> Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Camry</b>  Page 126	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Corolla</b>  Page 110	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Highlander</b>  Pages 140 & 141	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Highlander Hybrid Vehicle</b>	No Engine Oil Replacement Reminder.

# Reset Engine Oil Replacement Reminder Light

2006 Model Year Toyotas

Model	Reset Reminder Light Procedure
<p><b>'06 Land Cruiser</b></p> <p>Pages 127</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> <li>1. Turn the ignition key to the "OFF" position with the odometer reading shown.</li> <li>2. Turn the ignition key to the "ON" position while holding down the "ODO/TRIP" knob.</li> </ol> <p>Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second.</p>
<p><b>'06 Matrix</b></p> <p>Page 113</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> <li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li> <li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li> </ol> <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p><b>'06 Prius</b></p> <p>Pages 130 &amp; 131</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> <li>1. Press the "POWER" switch to the "OFF" mode with the odometer reading shown.</li> <li>2. Press the "POWER" switch twice to select the "IG-ON" mode while holding down the trip meter reset button.</li> </ol> <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p><b>'06 RAV4</b></p> <p>Page 136</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> <li>1. Turn the ignition key to the "OFF" position with the trip meter A reading shown.</li> <li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li> </ol> <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>

# Reset Engine Oil Replacement Reminder Light

2006 Model Year Toyotas

<b>Model</b>	<b>Reset Reminder Light Procedure</b>
<b>'06 Sequoia</b>  Page 169	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Sienna</b>  Page 195	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Solara</b>  Page 138	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the trip meter A reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
<b>'06 Tacoma</b>  Page 157	Reset the system by the following procedure: <ol style="list-style-type: none"><li>1. Turn the ignition key to the "OFF" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.

# Reset Engine Oil Replacement Reminder Light

2006 Model Year Toyotas

<b>Model</b>	<b>Reset Reminder Light Procedure</b>
<b>'06 Tundra</b>  Page 187	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<b>'06 Yaris</b>  Page 121	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"><li>1. Turn the ignition key to the "OFF" position with the trip A reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> <p>Hold down the button for at least 5 seconds. The indicator light flashes and the bars displayed in the odometer disappear gradually. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<b>'06 4Runner</b>  Page 153	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"><li>1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.</li><li>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</li></ol> <p>Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second.</p> <p>If the system fails to reset, the light will continue flashing.</p>