



BODY CONTROL MODULE (BCM)

Fuse	Amps	Circuits protected
F1	10	Glove compartment lamp Overhead console Vanity mirror lamp LH Vanity mirror lamp RH Rear interior lamp LH Rear interior lamp RH Second row interior lamp Second row seat relay
F2	7.5	Driver Seat Module (DSM) Front seat control switch LH
F3	20	Driver door latch
F4	5	Not used
F5	20	Not used
F6	10	Not used
F7	10	Not used
F8	10	Not used
F9	10	Not used
F10	5	Keyless entry keypad Rear Gate Trunk Module (RGTM) Hands free liftgate actuation module
F11	5	Not used
F12	7.5	Front Controls Interface Module (FCIM)
F13	7.5	Steering Column Control Module (SCCM) Instrument Panel Cluster (IPC) Gateway Module A (GWM)
F14	10	Not used
F15	10	Data Link Connector (DLC)
F16	15	Not used
F17	5	Not used
F18	5	Start control unit

Fuse	Amps	Circuits protected
F19	7.5	Not used
F20	7.5	Not used
F21	5	In-vehicle temperature and humidity sensor
F22	5	Occupant Classification System Module (OCSM)
F23	10	Driver door window control switch Roof opening panel module Direct Current/Alternating Current (DC/AC) inverter
F24	20	Driver door latch Passenger door latch Rear door latch LH Rear door latch RH
F25	30	Driver Door Module (DDM)
F26	30	Passenger Door Module (PDM)
F27	30	Roof opening panel module
F28	20	Audio Digital Signal Processing (DSP) module
F29	30	Not used
F30	30	Not used
F31	15	Not used
F32	10	Sync module [APIM] Front Control/Display Interface Module (FCDIM) Global Positioning System Module (GPSM) Radio Transceiver Module (RTM)
F33	20	Audio front Control Module (ACM)
F34	30	Run/Start power bus
F35	5	Restraints Control Module (RCM)
F36	15	Auto-dimming interior mirror Heated rear seat module
F37	20	Heated Steering Wheel Module (HSWM) Clockspring/Steering Angle Sensor Module (SASM)
F38	30 c.b.	Rear door window control switch LH Rear door window control switch RH