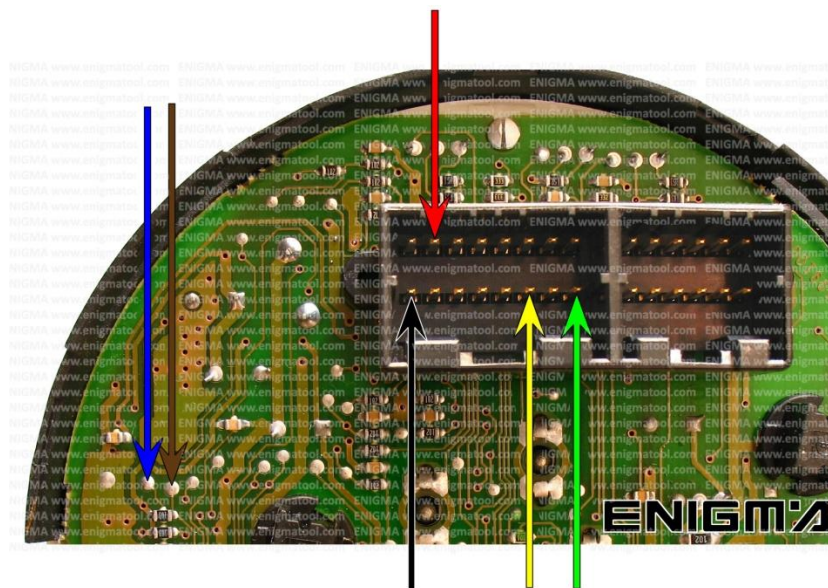# ALFA ROMEO 156 TO 2002

DASHBOARD PHOTO:

REQUIRED CABLE(s):
C11

FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the dashboard and open it carefully.
2. Remove the back side of the dash to get to the main board.
3. First solder cables as shown on **PHOTO 1**.
   Make sure that the connection you made is secure.
4. Before changing anything use **EDITOR** to read and save memory backup data from the dash.
5. Press the **READ KM** button and check if the value shown on the screen is correct.
6. Now you can use the **CHANGE KM** function.

PHOTO 1: *Solder cables according to the colors shown on the picture above.*

ALFA ROMEO 156 TO 2002

LEGAL DISCLAIMER: