

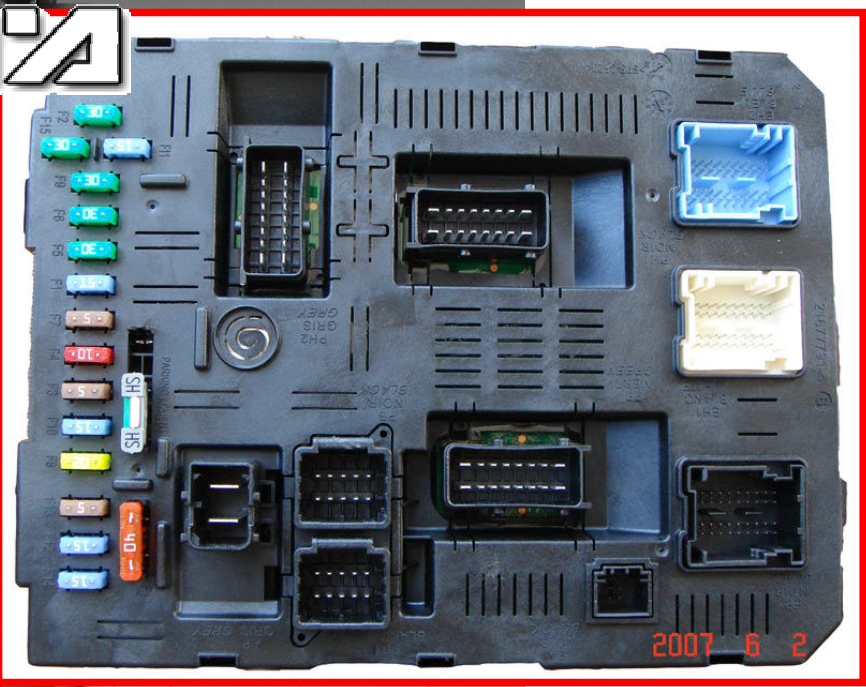


CITROEN C4 & PICASSO BSI

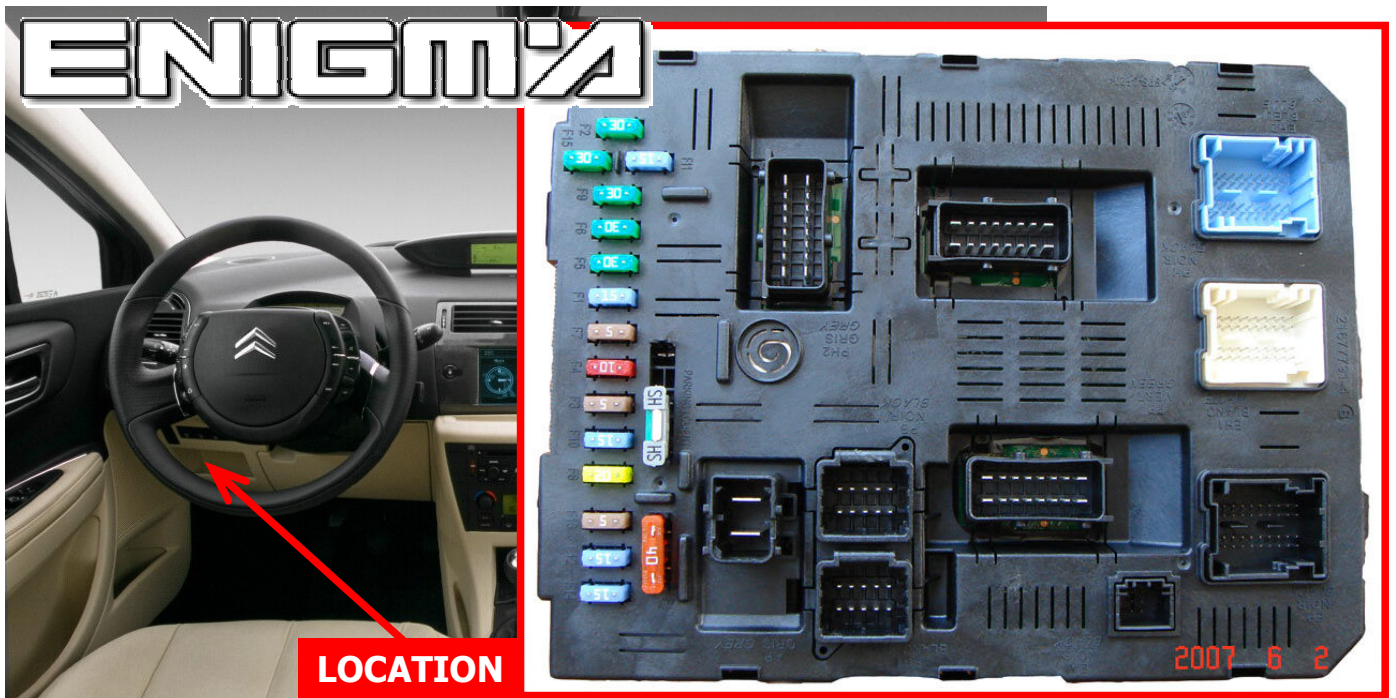

USE CABLE C4, REMOVE BACK PLASTIC COVER FROM BSI, THEN LOCATE EEPROM MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

VERSION 1:

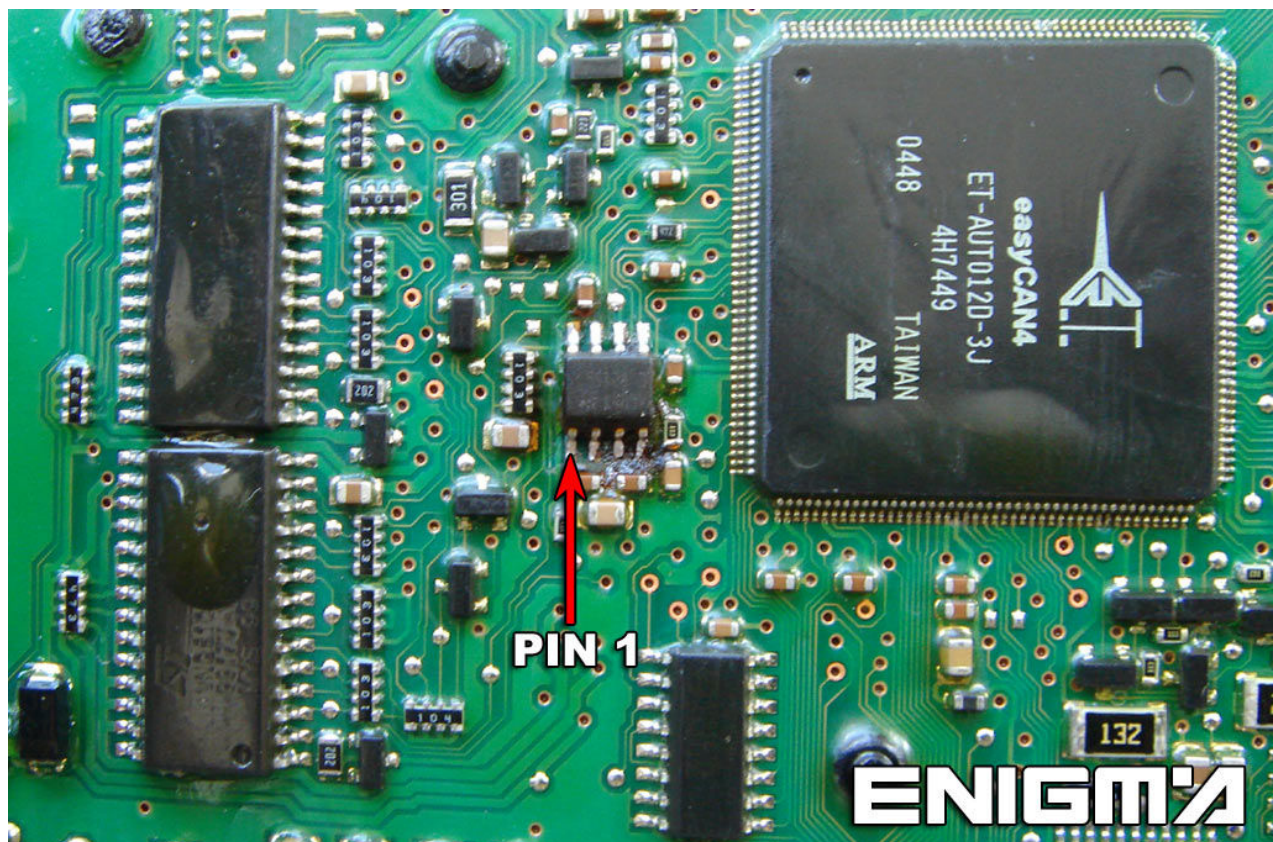

VERSION 2:

