


CITROEN XSARA BSI NEC

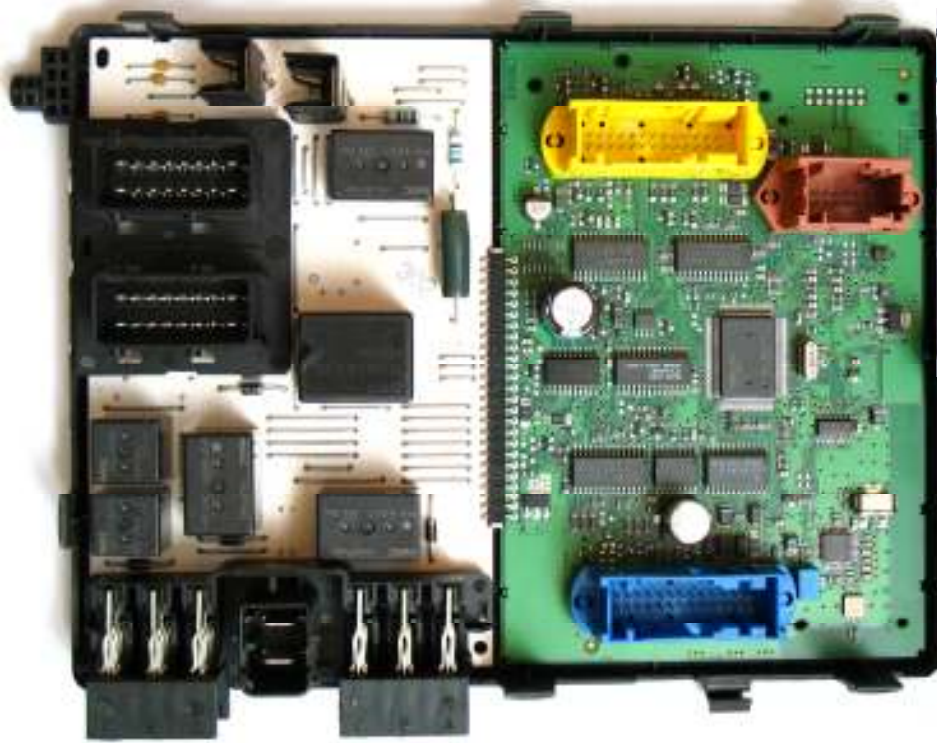

USE CABLE C13 ALWAYS CONNECTED TO A1 ADAPTER. TAKE OFF BOTH SIDES FROM BSI, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN OF BELOW PHOTO(WE MUST DESOLDER TRANSISTOR FROM LEAD 9 AND UP PIN 10):

