



# CITROEN XSARA DASH TO 2000



USE CABLE C4, OPEN BACK PART OF DASH, FOR THIS WE MUST TAKE OFF SOME CROSS SCREWS:

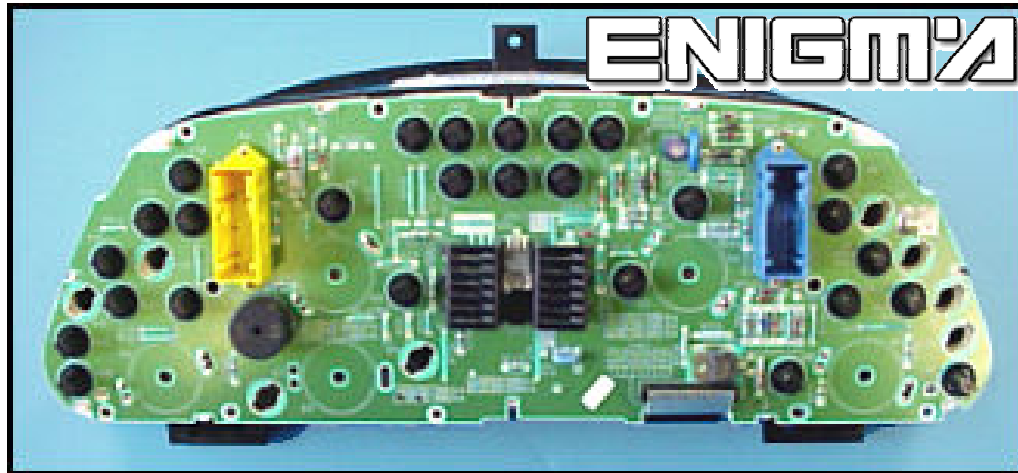

CAREFULLY TAKE OFF BACK FIXED FROM ENGINES, THESE ARE SOME PLASTIC CLIPS THAN JUST NEED TO PRESS, YOU DON'T NEED TO TAKE OFF NAILS, THEN YOU NEED TO TAKE OFF SCREEN CONECTION, AND FINALLY BOARD IS FREE, LOCATE EPROM IN FRONT OF THIS BOARD AND CLIP IT CHECKING PIN 1 AS SHOWN OF BELOW PHOTO:

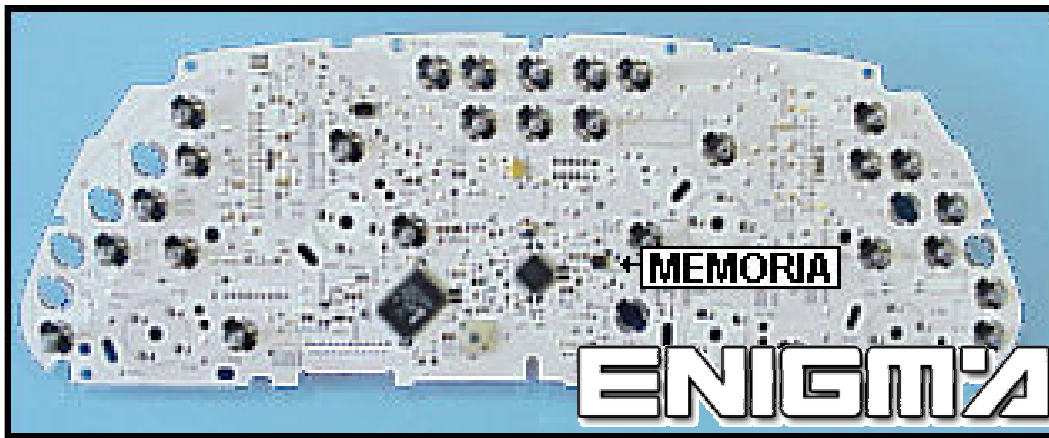

BE SPECIAL CAREFULLY WITH A GUM THAT IS BASE FROM RESET BUTTOM.  
IT IS BETTER IN THIS CAR CLIP THE QUARTZ TOO

