


# DODGE RAM 2008



USE CABLE C12 - HCS12, LOCATE PLUG, THEN SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW:

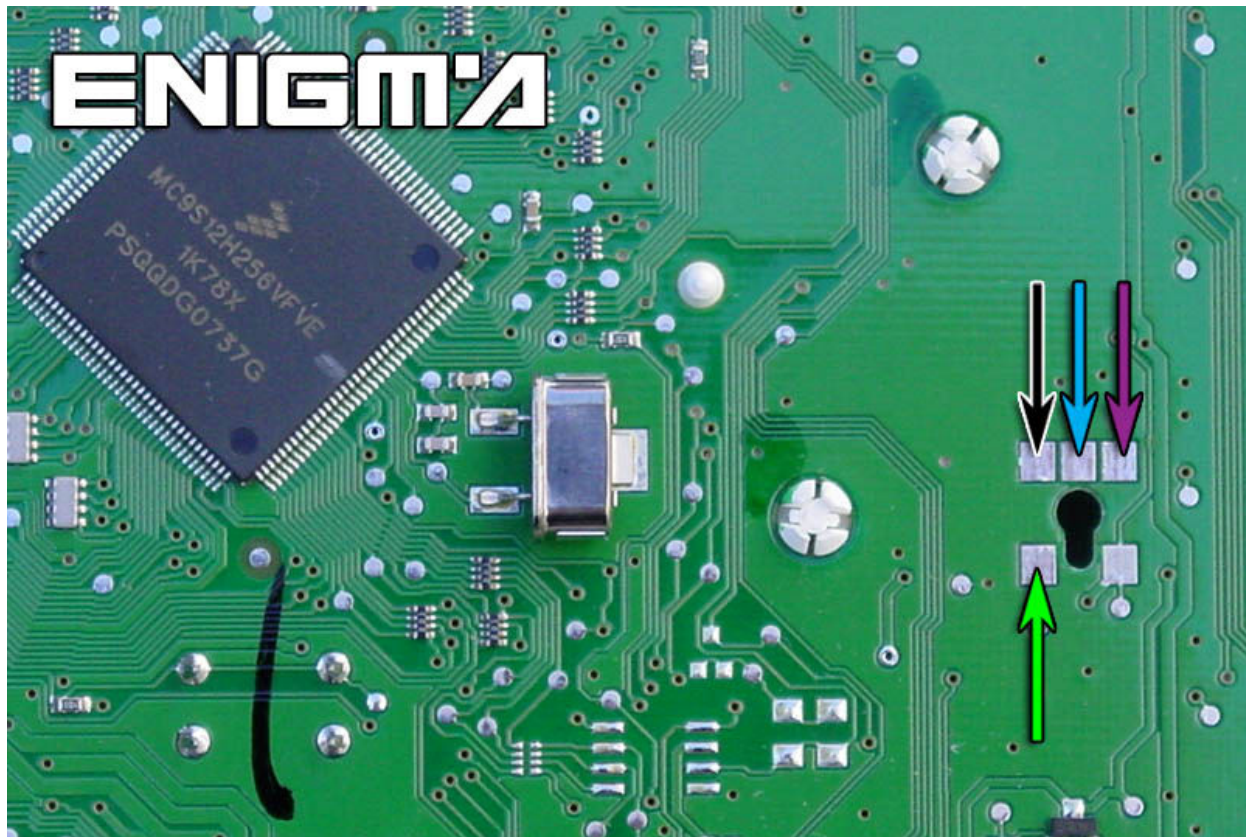

TO POWER UP DASH, WE MUST SOLDER POSITIVE (+) & NEGATIVE (-) LIKE ON PHOTOS BELOW:

