


FIAT CROMA FROM 2006

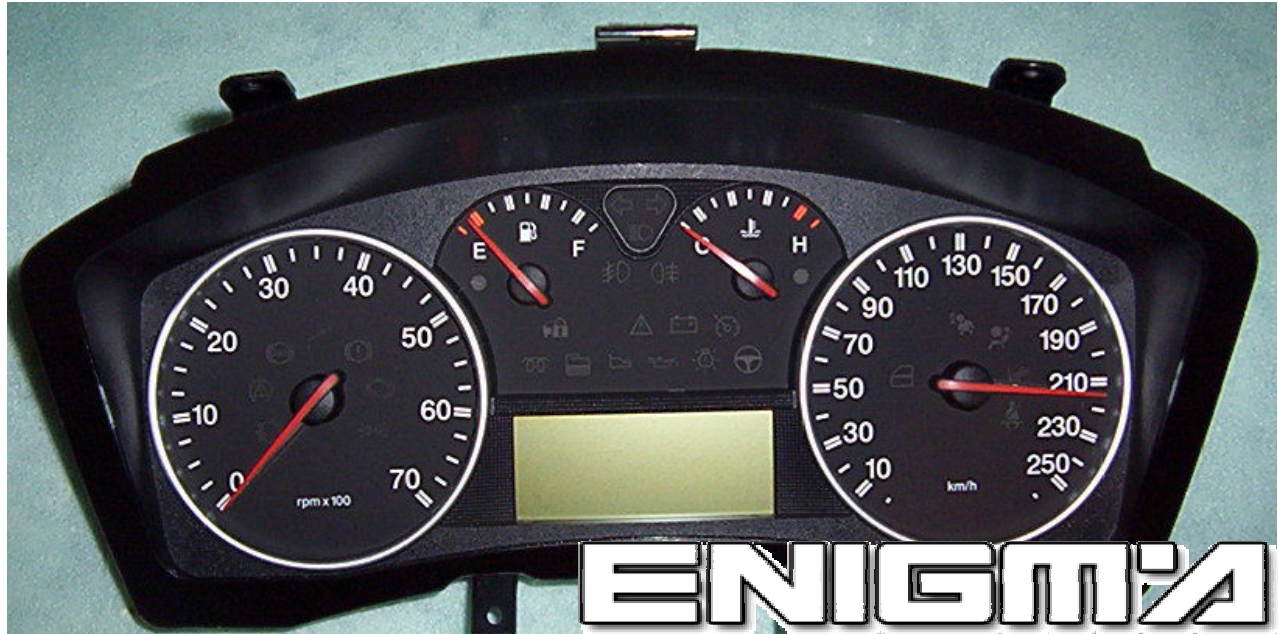

USE CABLE C4, REMOVE ALL PLASTICS AND TAKE OFF CAREFULLY NAILS, THEN MORE PLASTICS TILL WE HAVE CLEAN THE BOARD. WHEN WE CAN SEE EPROM MEMORY, CLIP IT CHECKING PIN 1 AS SHOWN OF BELOW PHOTO:

