



FIAT PUNTO3 95040

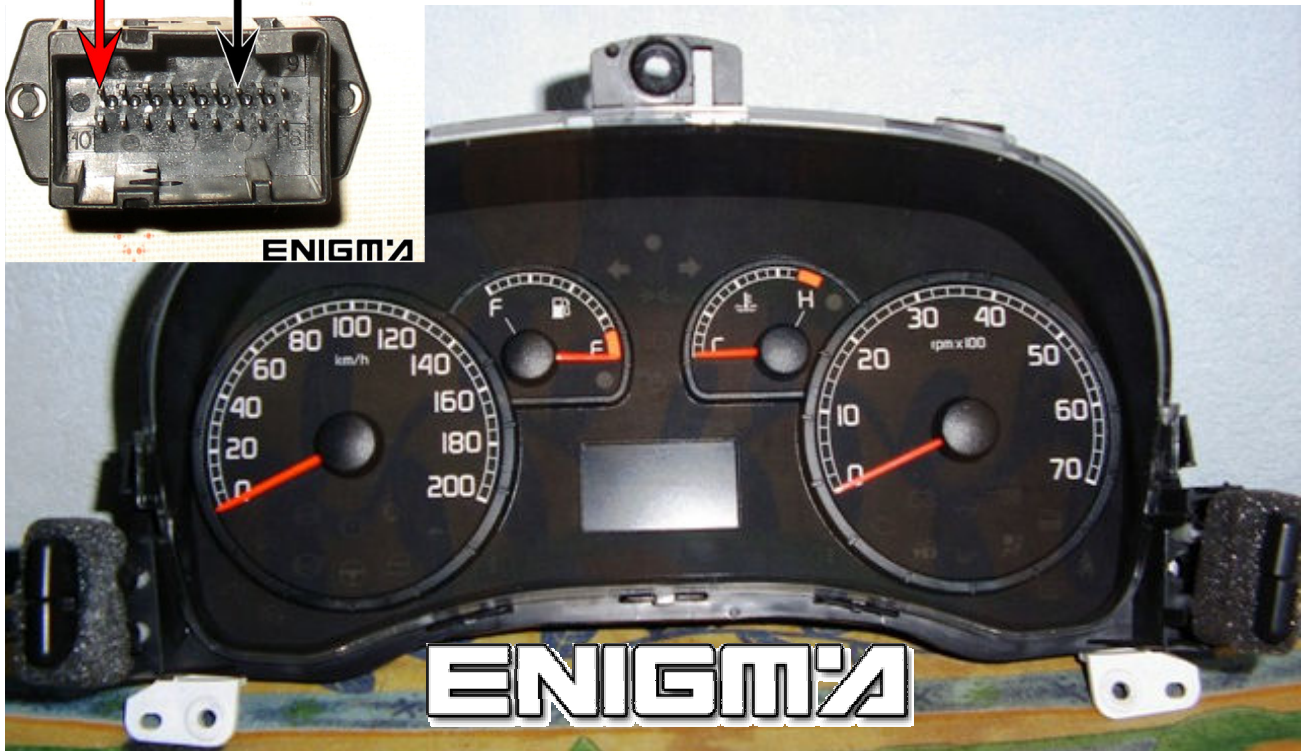

USE CABLE C4, TAKE OFF DASH FROM CAR DASH, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY. WHEN WE HAVE MAIN BOARD ON OUR HANDS LOCATE EPROM MEMORY, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

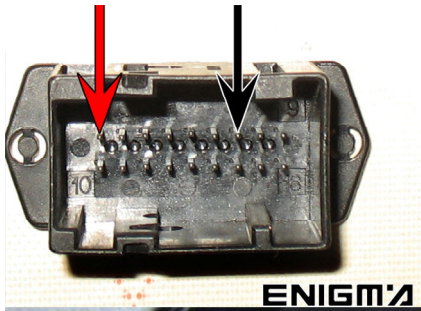