


# HONDA FOREMAN

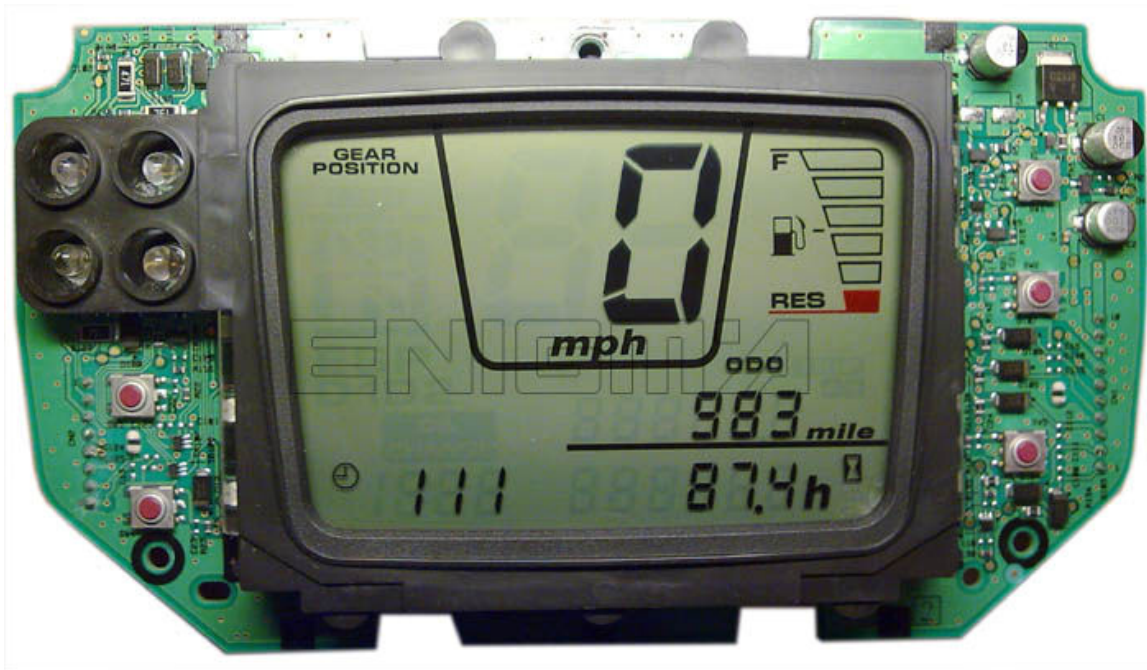

USE CABLE C7, REMOVE BACK PLASTIC COVER FROM DASH, THEN LOCATE POINTS ON MAIN BOARD SHOWN OF BELOW PHOTO, AND THEN SOLDER CABLE LEADS CONCORDANCE WITH ITS NUMBER OR COLOURS:

