


HONDA NT 700 DEAUVILLE



USE CABLE C4, OPEN DASH, PLEASE MAKE IT CAREFULLY, THEN LOCATE EEPROM RL56 MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO:

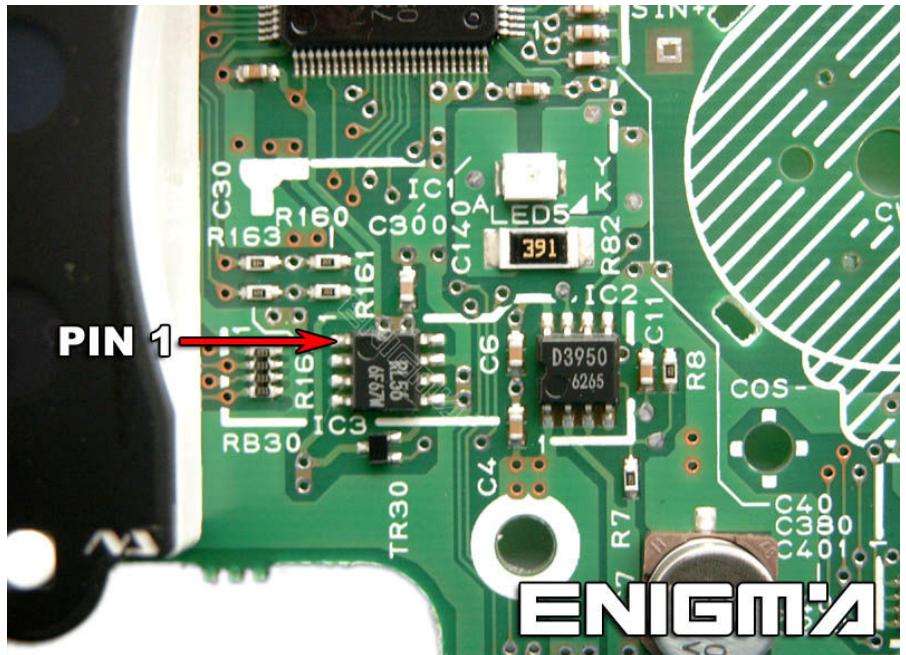

YOU CAN ALSO USE C7 CABLE, WE ONLY NEED TO LOCATE POINTS IN THE BACK SIDE FROM MAIN BOARD, LIKE IN PHOTO BELOW AND SOLDER CABLE LEADS AS IT SHOWS TO US:

