


# HONDA S2000 C56

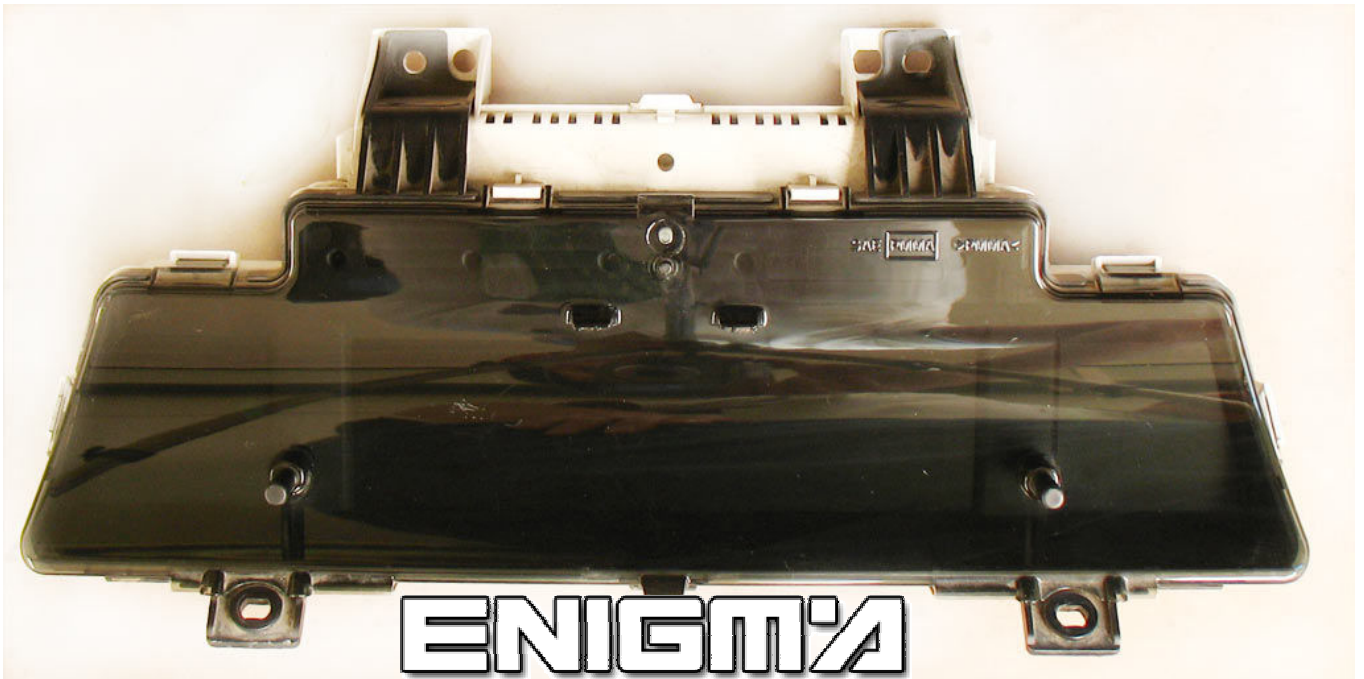

USE CABLE C4, REMOVE BACK PLASTIC COVER FROM DASH, MAKE ALL WORK CAREFULLY, THEN LOCATE EPROM L56R, AND CLIP IT CHECKING PIN 1 AS SHOWN ON PHOTO BELOW:

