
LANCIA LYBRA




USE CABLE C11, REMOVE BACK PLASTIC COVER FROM DASH AND CHECKING DIFFERENT VERSIONS OF BOARD:

<u>VERSION 1</u>: **S**OLDER POWER CABLES LIKE WE CAN SEE ON NEXT PHOTO:

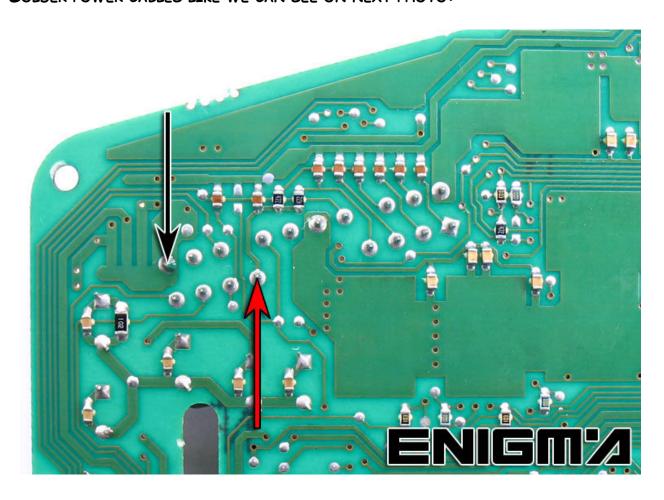

Now we must connect or solder cable leads according to colours as shown on photo below:

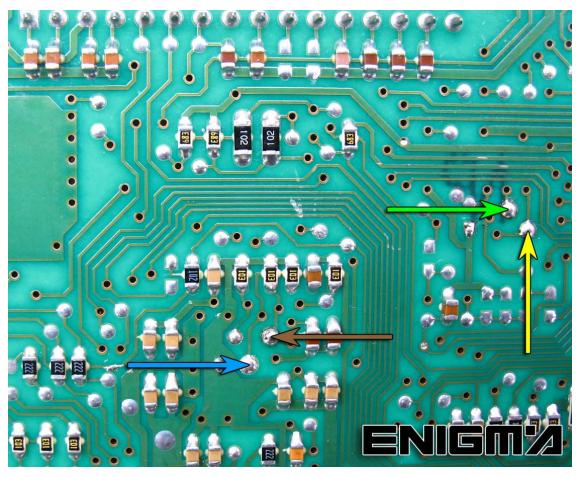

VERSION 2: SOLDER POWER CABLES LIKE WE CAN SEE ON NEXT PHOTO:



Now we must connect or solder cable leads according to colours as shown on photo below:

