
## MERCEDESBENZ C-W203 EZS TO 2004


USE CABLE C12. REMOVE FROM CAR THIS MODULE CAREFULLY AND OPEN IT.



NEXT SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON PHOTO BELOW:

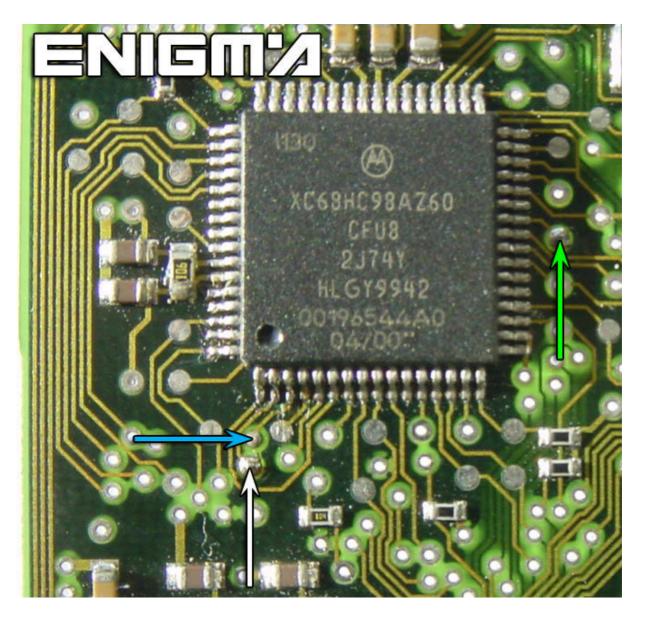

IF MICRO MASK IS 1J35D OR 3J74Y OR 4J74Y, WE MUST USE PHOTO BELOW, REMEMBER TO SOLDER RESISTOR OF 10K TO GREY CABLE:

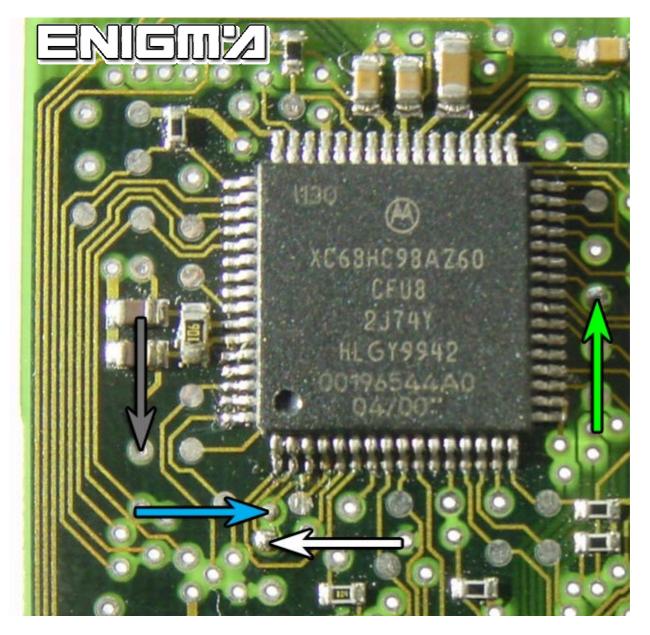

IN BOTH CASES WE MUST USE SAME POWER CONNECTION:

