


MERCEDES BENZ E-W211 EZS 9s12

USE CABLE **C45 + A6 ADAPTER**. REMOVE MODULE FROM CAR CAREFULLY AND OPEN IT.



NOW REMOVE BACK PLASTIC COVER FROM EZS, AND LOCATE POINTS ON THE BOARD CHECKING PHOTOS BELOWS AND SOLDER CABLE LEADS AS IT SHOWS TO US:

VERSION 1:

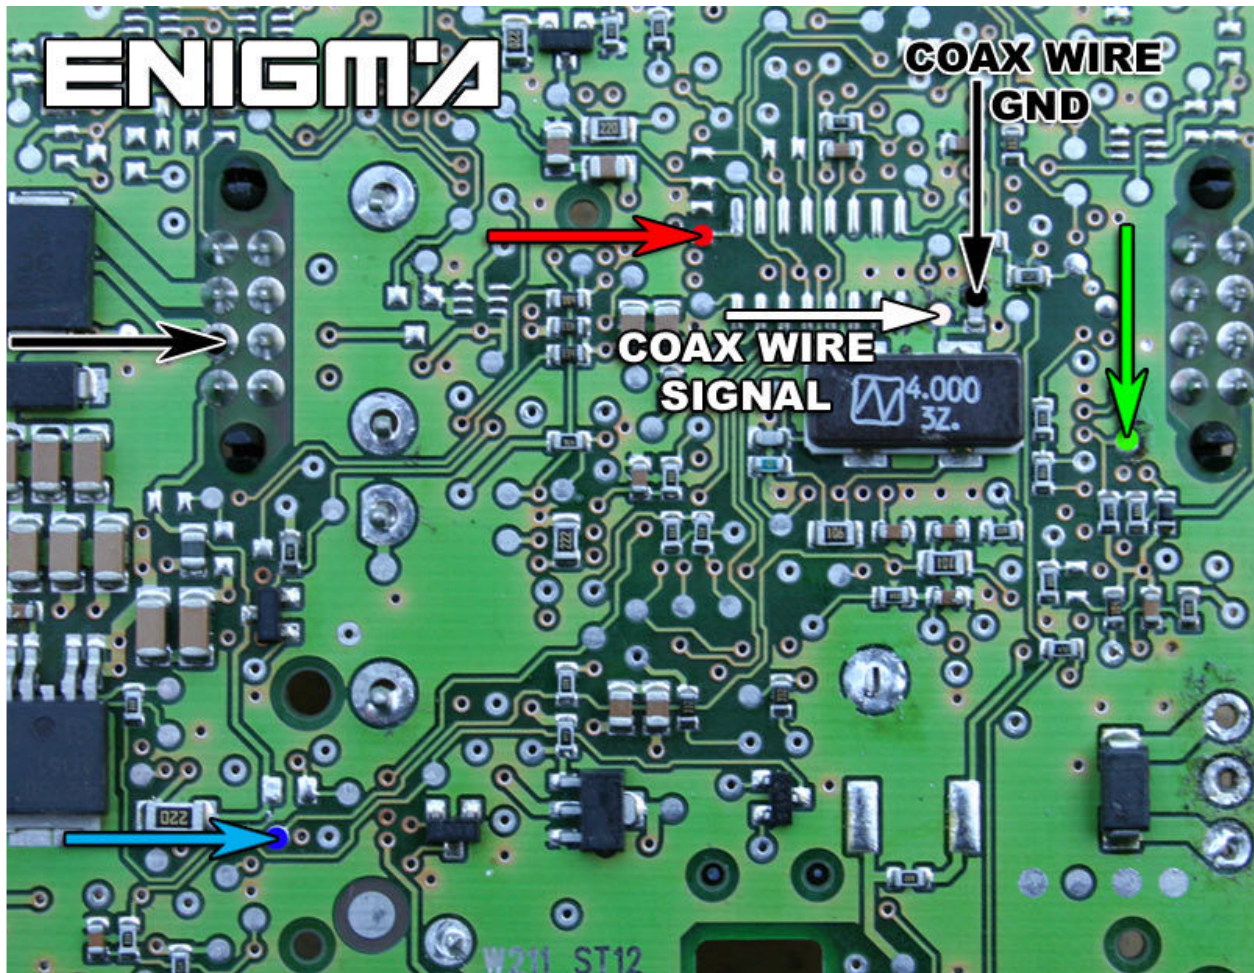

VERSION 2:

