
## MERCEDESBENZ E-W211 ZGS To 2004

USE CABLE C12. REMOVE FROM CAR THIS MODULE CAREFULLY AND OPEN IT.

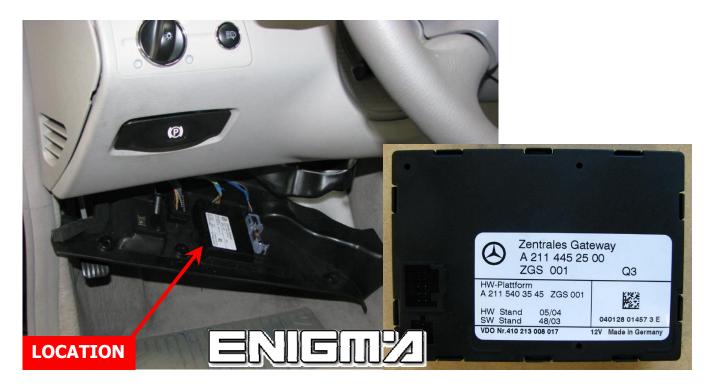

NEXT SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON PHOTO BELOW:
REMEMBER TO CUT TRACK FROM BLUE LEAD, AFTER WE MUST RESTORE

