



# MERCEDES BENZ SPRINTER KIENZLE To 2000



IF U HAVE VAN, U DON'T NEED TO REMOVE DASH FROM IT, BUT IF YOU HAVE ONLY DASH U MUST POWER UP IT, HERE U CAN SEE HOW TO POWER UP:

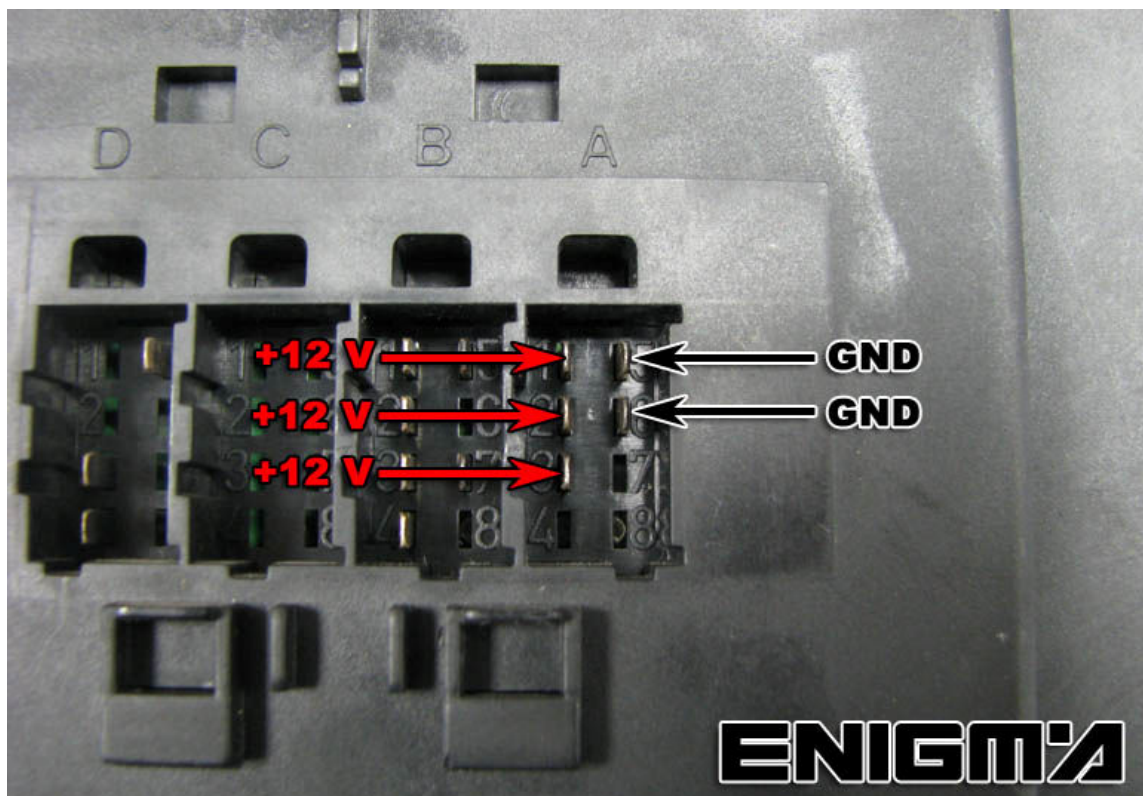

USE IN THIS KIND OF DASH, TILL 2000 AND REMOVE PROTECTION FROM IT:

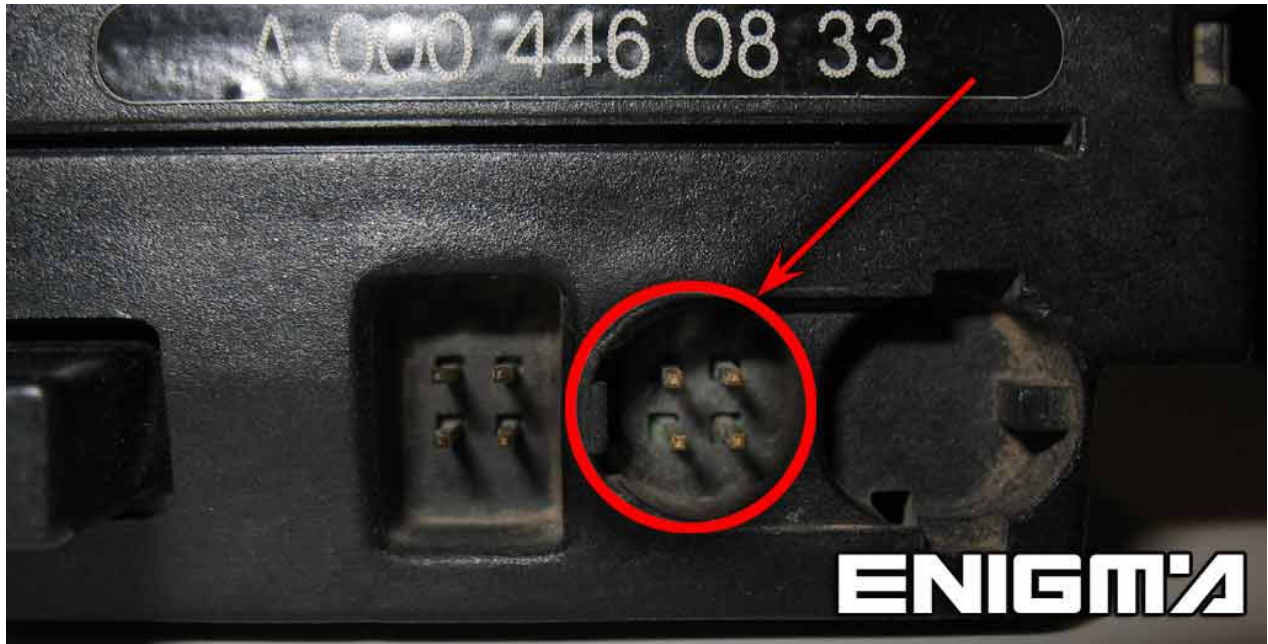

USE SPECIFIC CABLE C33, CONNECT PLUG TO DASH LIKE WE CAN SEE ON PHOTO BELOW AND RUN PROGRAM:

