


# MITSUBISHI LANCER 93C46

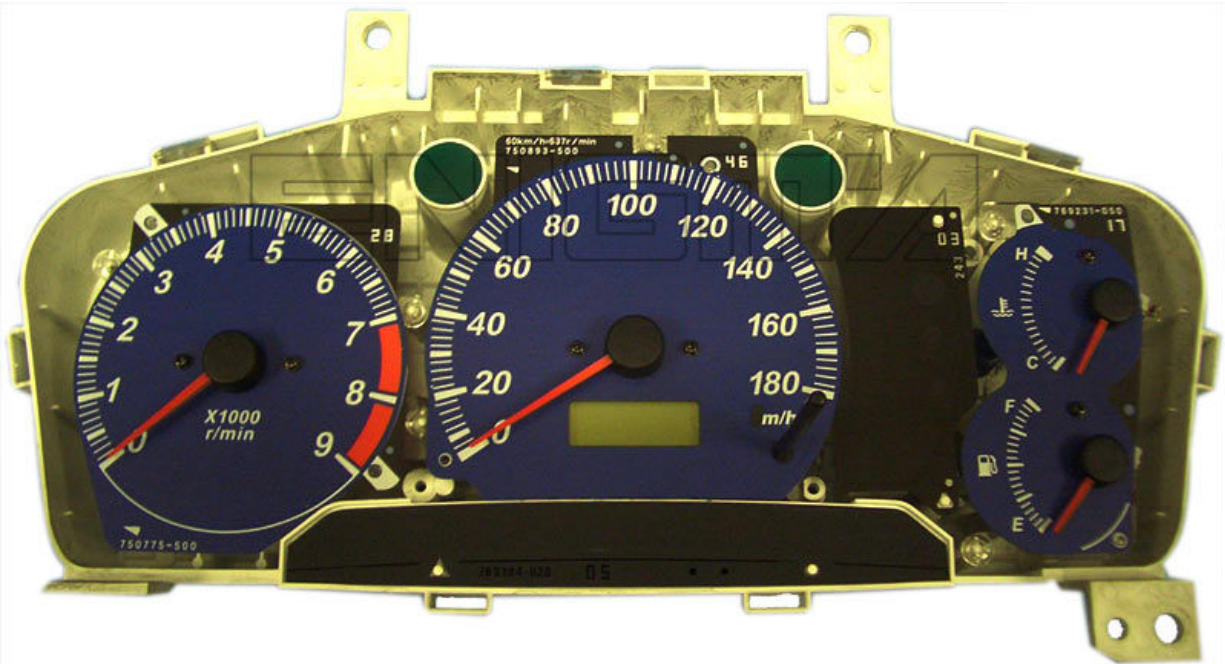

Use C7 CABLE, REMOVE ONLY SPEEDOMETER, IT IS THE SCREEN ONE, THEN WE CAN SEE THE 93C46 EPROM, AND WITH THE PHOTO BELOW WE CAN SOLDER LEADS AS WE CAN SEE:

