


MITSUBISHI PAJERO 93C56

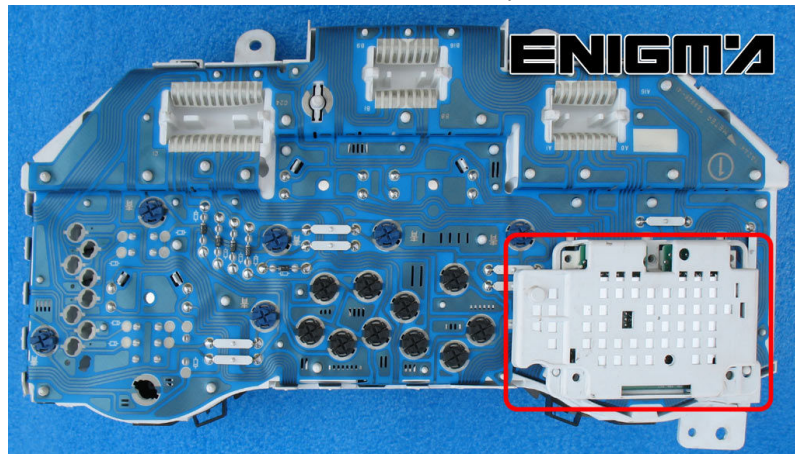

USE CABLE C4, REMOVE BACK BOX FROM DASH, WE CAN SEE ON NEXT PHOTO:



OPEN AND LOCATE EPROM 93C56, SOMETIMES MUST BE CLENEED, AND CLIP IT CHECKING PIN 1 AS SHOWN IN THE PHOTO BELOW:

