


OPEL ECU 1.3

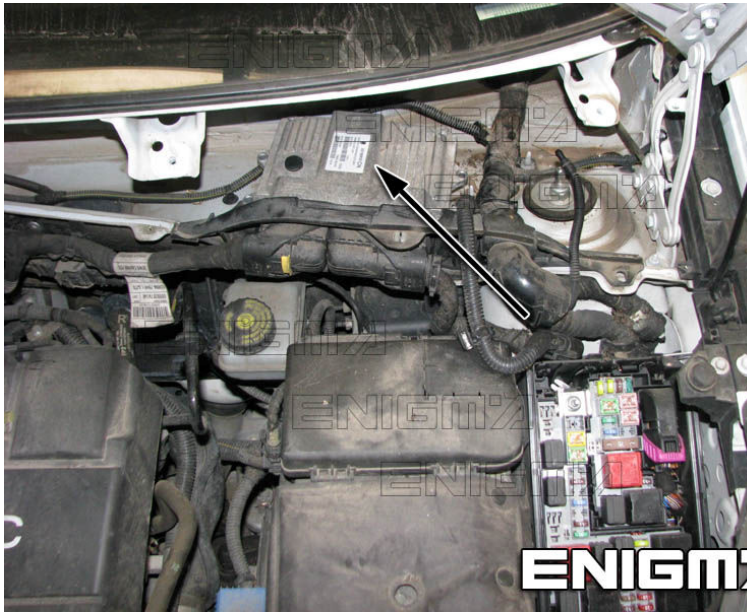

USE CABLE C4, REMOVE ECU FROM CAR, OPEN IT CAREFULLY, ON THE BOARD'S HIDDEN SIDE WE CAN LOCATE EPROM, CLIP IT AS YOU CAN SEE ON BELOW PHOTO:

