



# OPEL ZAFIRA FROM 2009

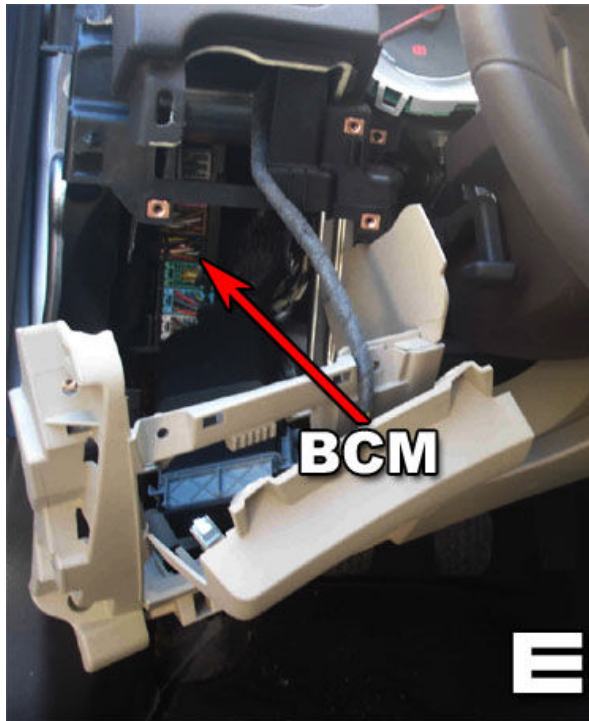

**ENIGMA**

WE HAVE TO USE A SPECIAL PROCEDURE TO WORK ON THOSE CARS:

1. DISCONNECT BATTERY.
2. REMOVE PLASTIC COVERS AND DISCONNECT CAREFULLY BOX PLUGS.
3. PULL IT OFF AND USING CABLE C4, OPEN BCM, AND THEN LOCATE EEPROM 24C16 MEMORY AND CLIP IT CHECKING **PIN 1** AS SHOWN OF PHOTO BELOW:

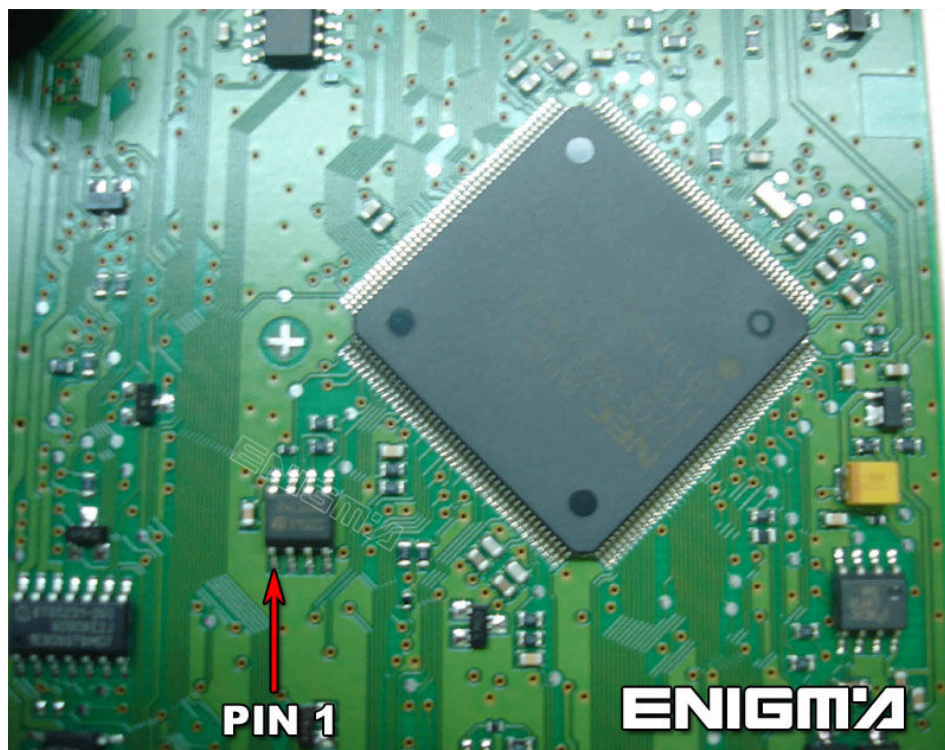

4. MOUNT AND PLUG BCM BACK, LAST THING IS CONNECT BATTERY.