


PEUGEOT JET FORCE 125

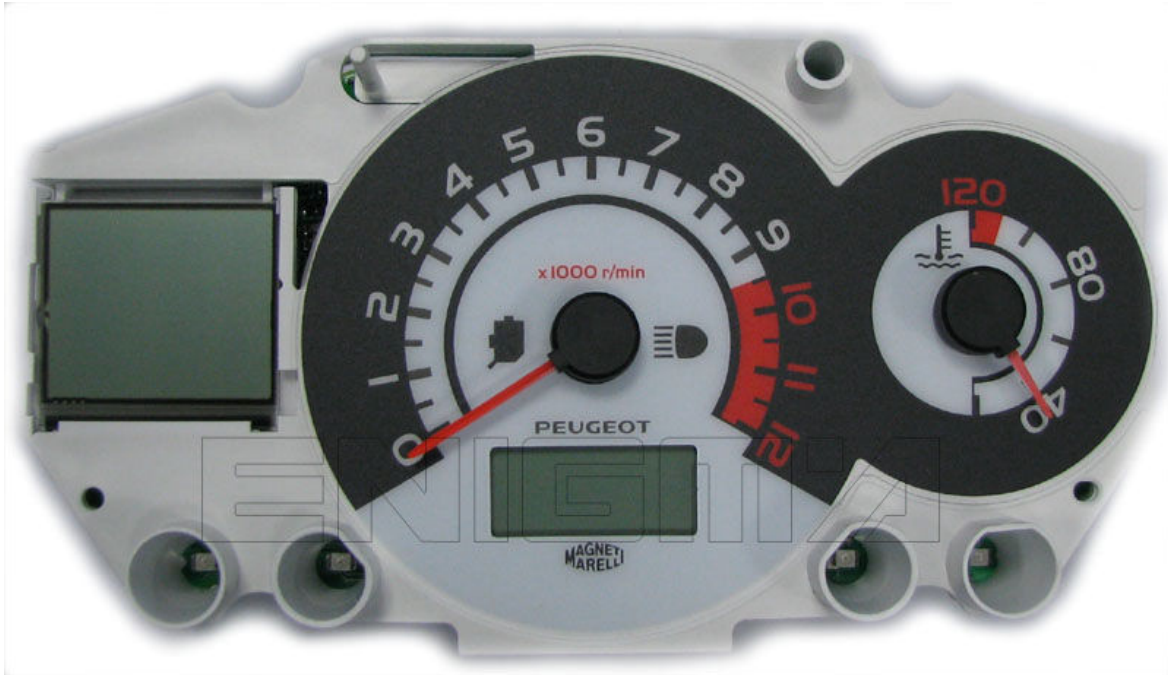

USE CABLE C4, OPEN OUTSIDE COVERS FROM DASH, THEN REMOVE NAILS AND SCREEN, VERY EASY, JUST SOME SCREWS, WITH BOARD IN OUR HANDS LOOK FOR EPROM AND CLIP IT CHECKING **PIN 1** AS SHOWN OF BELOW PHOTO:

