



RENAULT MEGANE-SCENIC SAGEM C46



USE CABLE C4, OPEN ALL DASH, THEN REMOVE ALL PLASTIC INSIDE WITH NAILS AND ENGINES, MAKE ALL WORK WITH BIG CAREFULL, AND TAKE OFF MAIN BOARD LIKE IN THIS PHOTO:

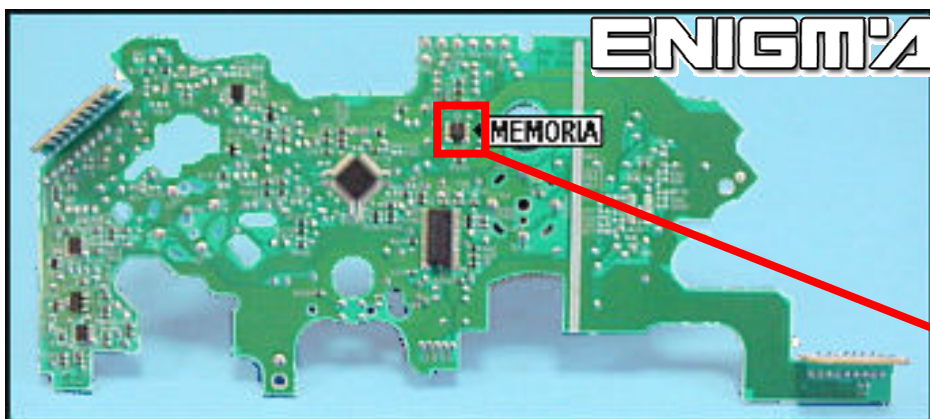

LOCATE EPROM **93C46**, CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO:

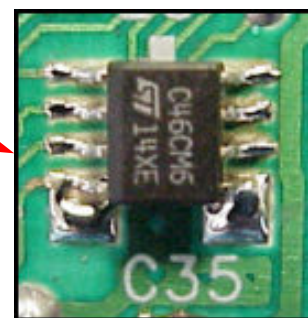

BE SPECIAL CAREFULLY WITH CONNECTION WIRES (A-B) AND SPECIAL TORX SREWS:

