


RENAULT TWINGO BORG




REMOVE DASH FROM CAR. NOW YOU HAVE TWO WAYS TO ADJUST THIS DASH:

METHOD 1:

USE SPECIFIC CABLE C42. WHEN BOARD IS ON OUR HANDS, CONNECT PLUG TO DASH LIKE WE CAN SEE ON NEXT PHOTO:

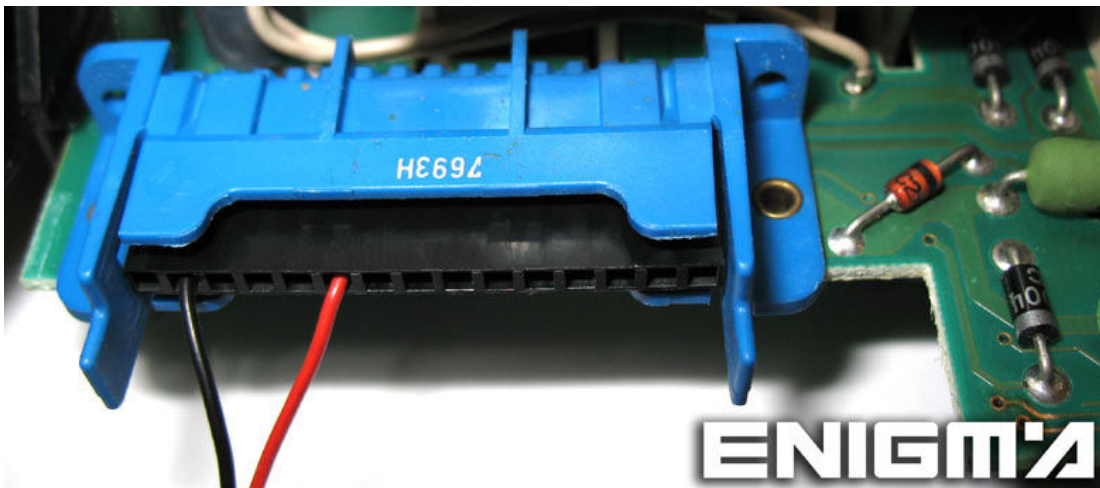

THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW, REMEMBER TO LIFT UP PIN FROM WHITE LEAD:

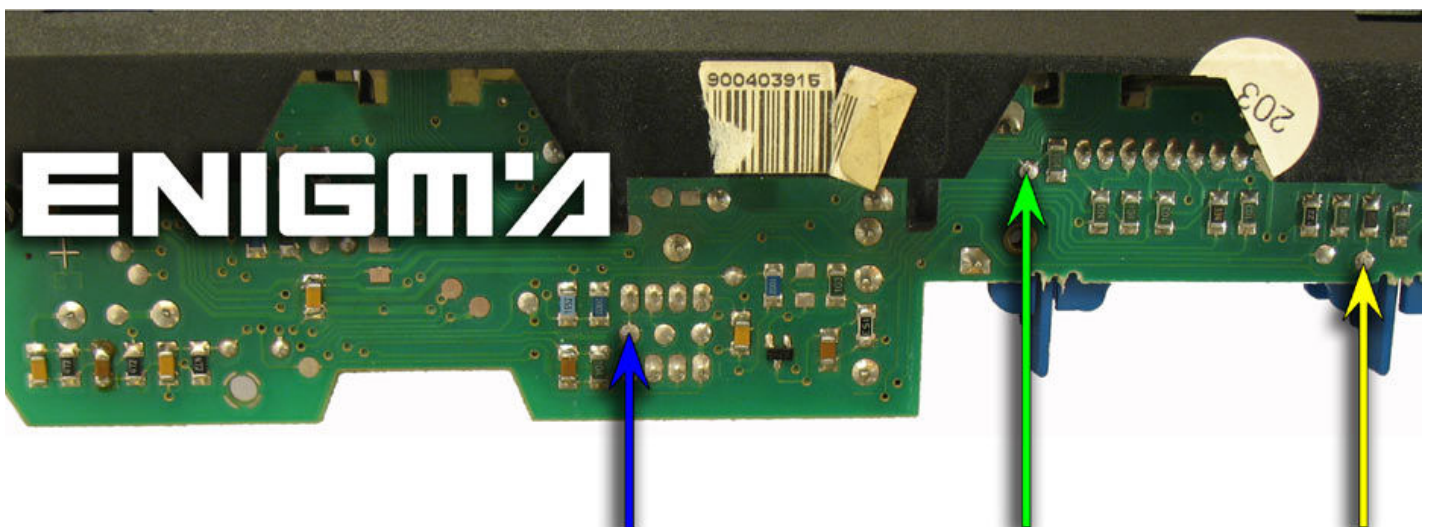



METHOD 2:

USE CABLE C8. WHEN BOARD IS ON OUR HANDS, SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW. IN THIS METHOD YOU HAVE ALSO TO LIFT UP PIN FROM WHITE LEAD:

