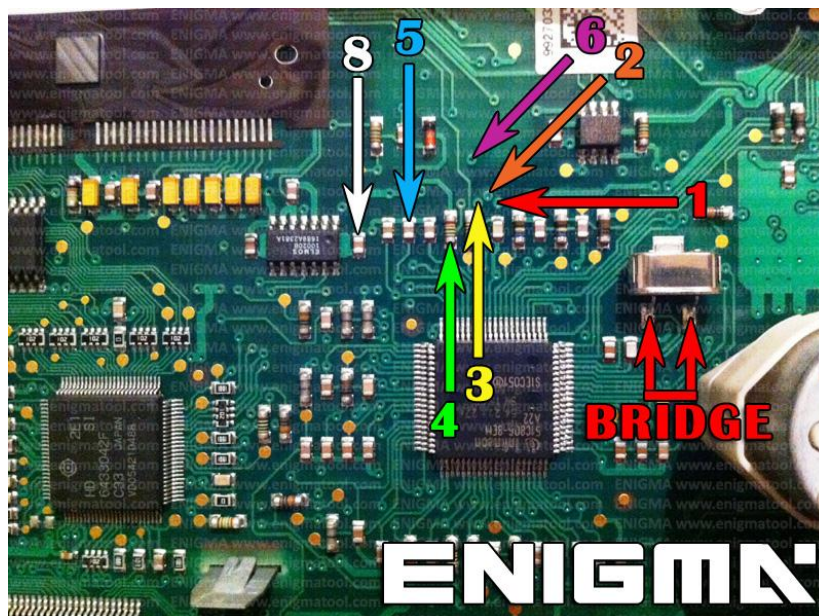# ROVER 75 WITH COMPUTER 93S56

DASHBOARD PHOTO:

REQUIRED CABLE(s):
C7

FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the dashboard and open it carefully.
2. Remove the back side of the dash to get to the main board and identify it.
3. Solder cable C7 as shown on PHOTO1.
   ! Remember to make BRIDGE like shown on PHOTO1 !
4. Make sure that the connection you made is secure.
5. Press the **READ EEP** button and save **EEPROM** memory backup data.
6. Press the **READ KM** button and check if the value shown on the screen is correct.
7. Now you can use the **CHANGE KM** function.

PHOTO 1: *Solder cable C7 according to the colors like shown on the photo above.*

ROVER 75 WITH COMPUTER 93S56

LEGAL DISCLAIMER: