


# TOYOTA LAND CRUISER C66



USE CABLE C7, REMOVE BACK BOX FROM DASH, WE CAN SEE ON NEXT PHOTO:

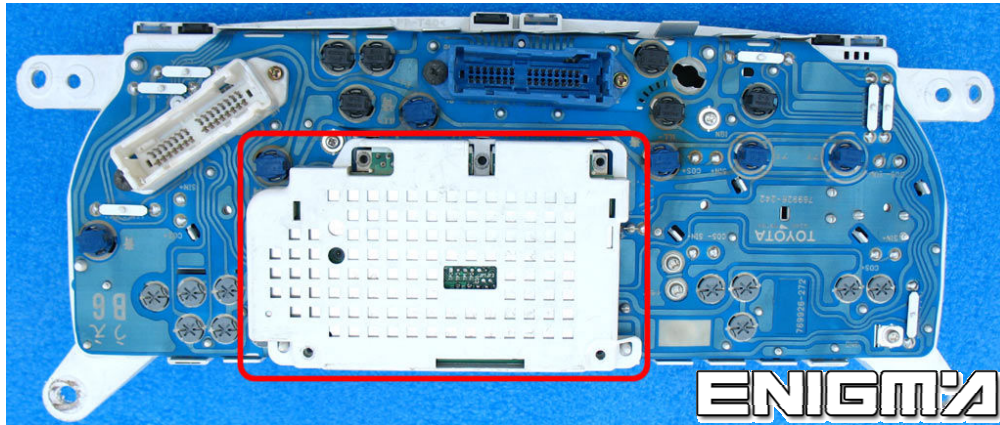

OPEN IT AND LOCATE POINTS ON THE BOARD, AND THEN SOLDER CABLE LEADS CONCORDANCE WITH ITS NUMBER-COLOUR:

