



TOYOTA PREVIA

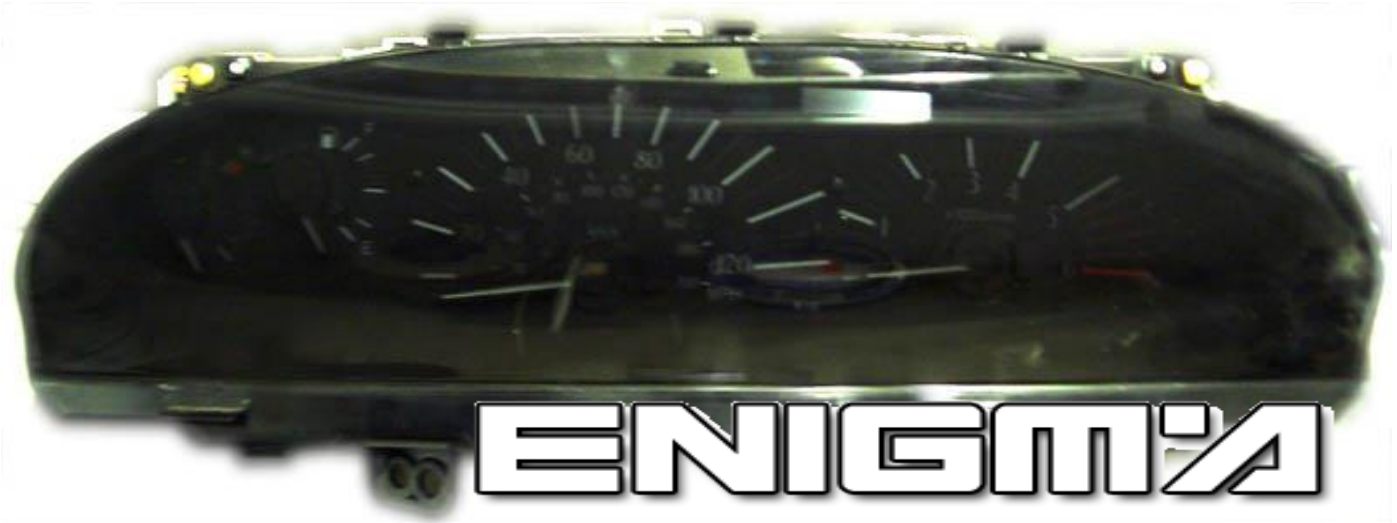


USE C7 CABLE, AFTER REMOVE DASH FROM CAR, TAKE OFF BACK PLASTIC COVER, ON THE BOARD LOCATE POINTS LIKE INTO THE PHOTOS BELOW ACCORDING WITH YOUR BOARD VERSION AND SOLDER CABLE LEADS AS THEY SHOW TO US:

Version 1:

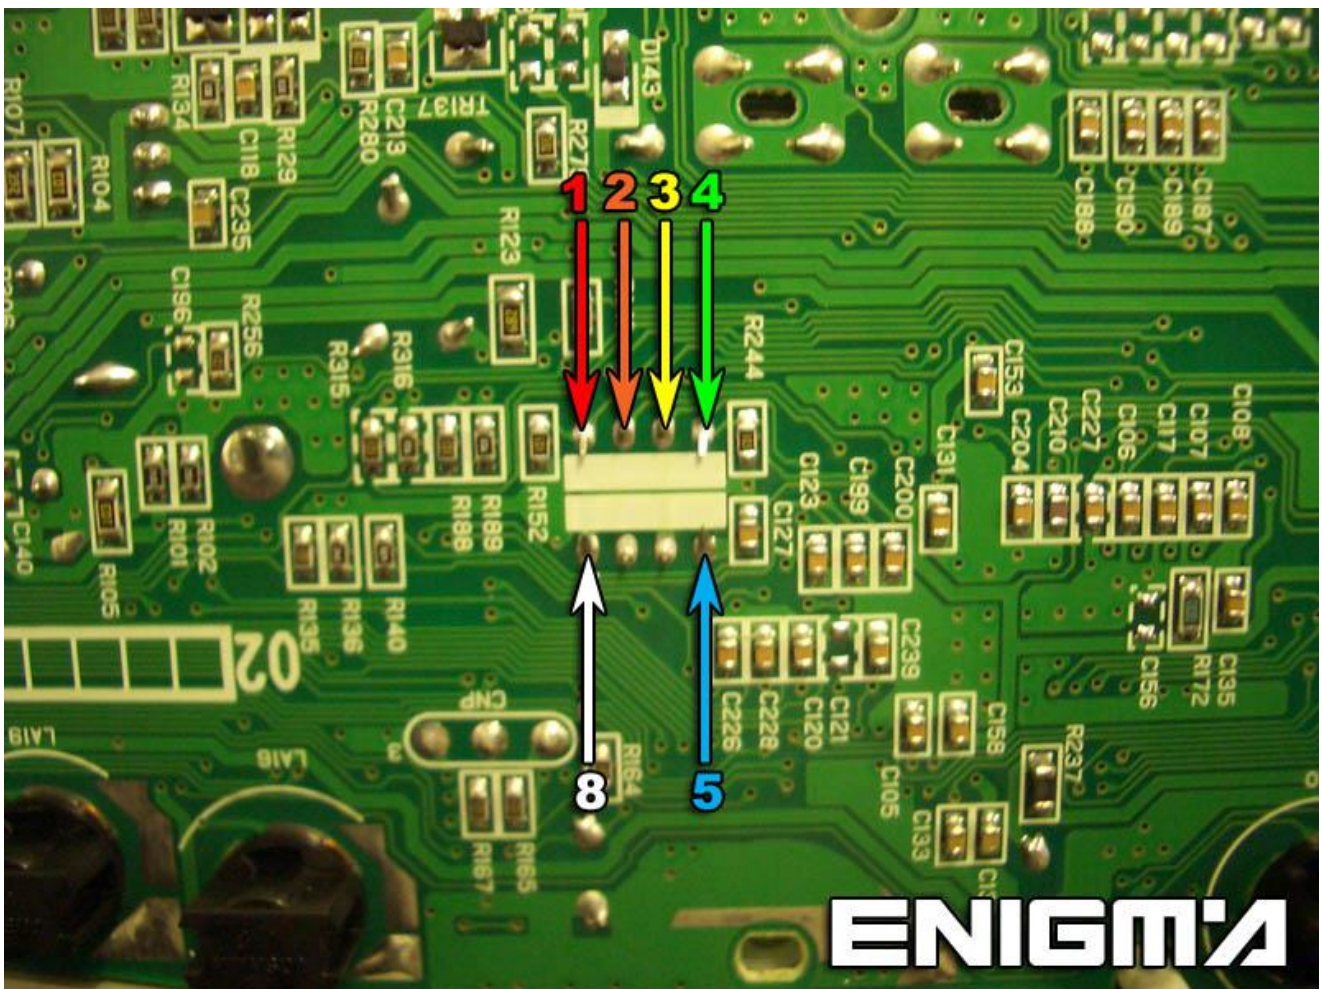

Version 2:

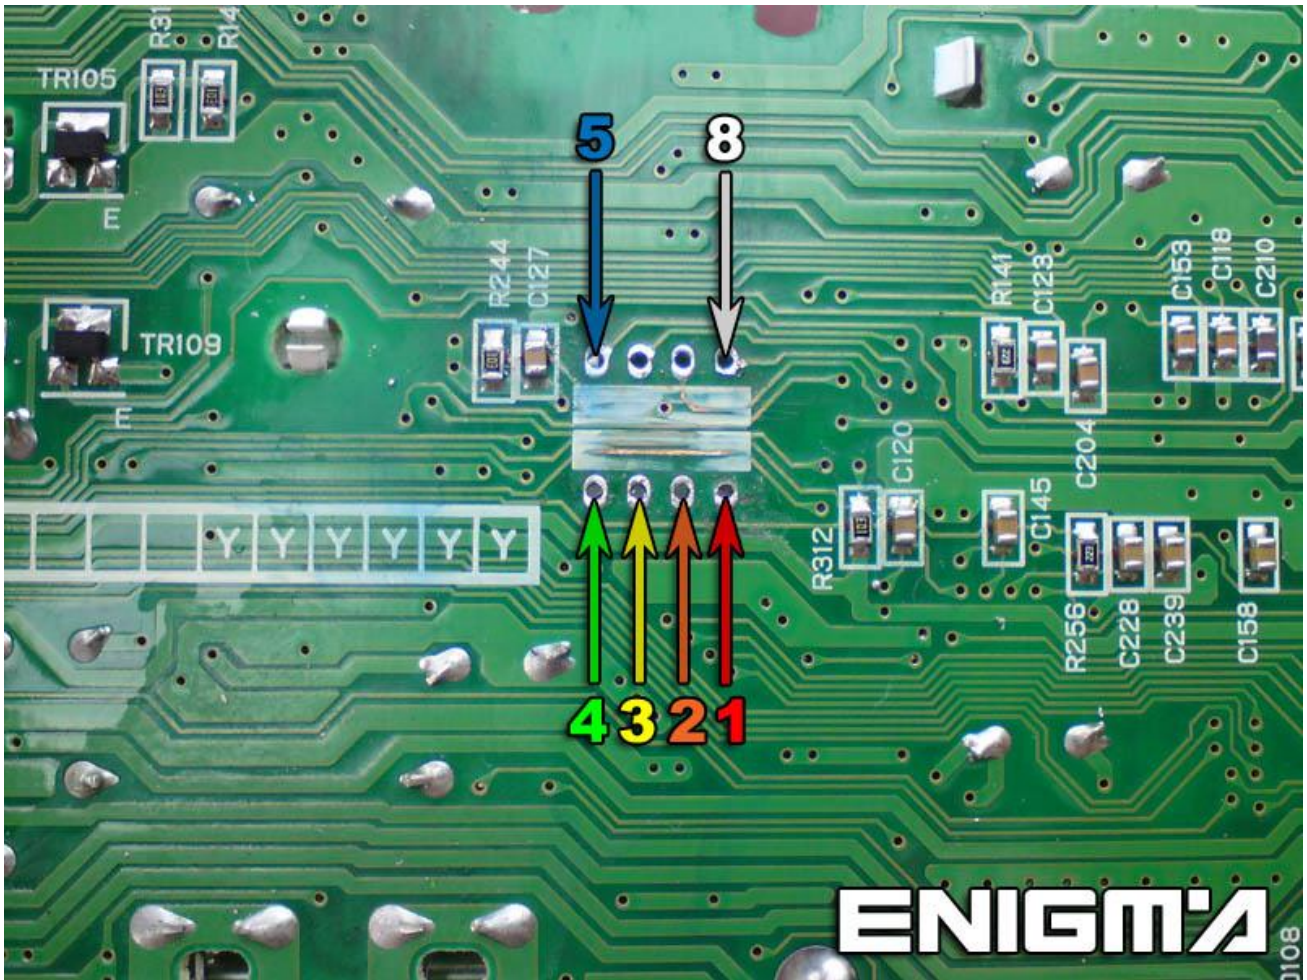

Version 3:

