
## TOYOTA PRIUS

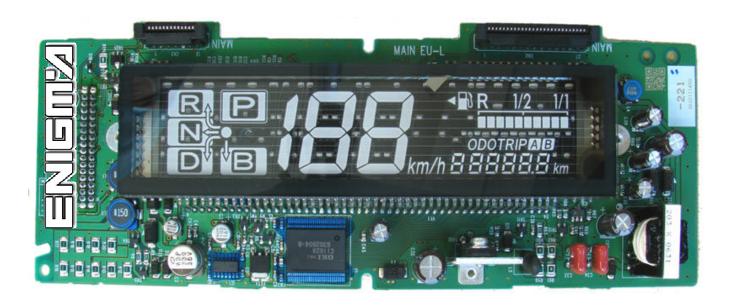

Use cable C7, remove dash from car, it can take you some time... Open dash, and then locate points in the main board like in photo below and solder cable leads as it shows to us:

