



TOYOTA RAV 4 TO 2002

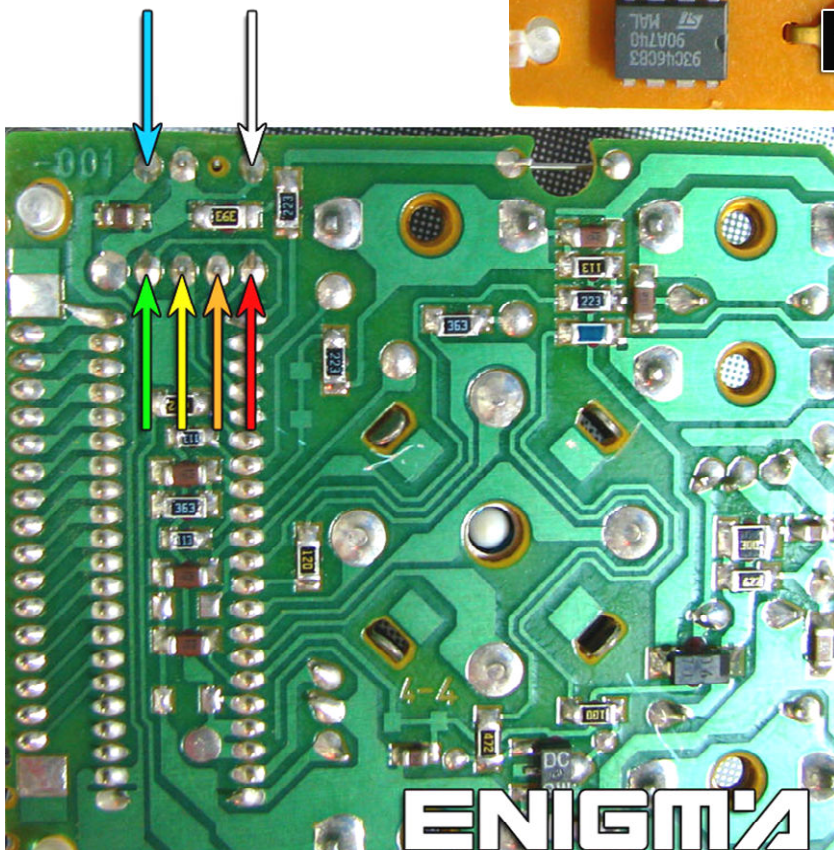

USE CABLE C5, OPEN DASH, PLEASE MAKE IT CAREFULLY, WE WORK ONLY ON SPEEDOMETER, THEN LOCATE EEPROM 93C46 MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO:

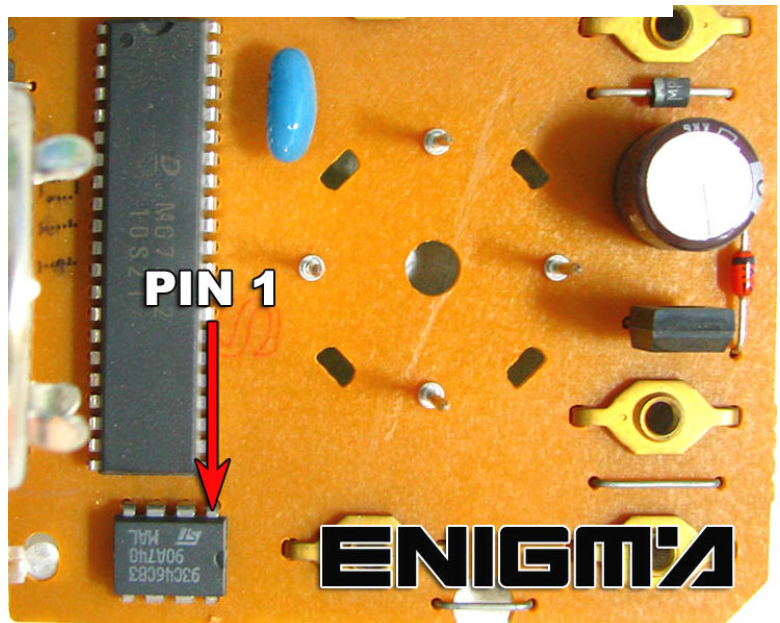

YOU CAN ALSO USE C7 CABLE, WE ONLY NEED TO LOCATE POINTS IN THE MAIN BOARD LIKE IN PHOTO AND SOLDER CABLE LEADS AS IT SHOWS TO US: