
## Volvo C30



USE C12 CABLE, REMOVE DASH FROM CAR AND OPEN IT COMPLETELY. LOCATE POINTS ON THE MAIN BOARD LIKE IN PHOTOS BELOW AND SOLDER CABLE LEADS AS THEY SHOW TO US:

## **VERSION 1:**

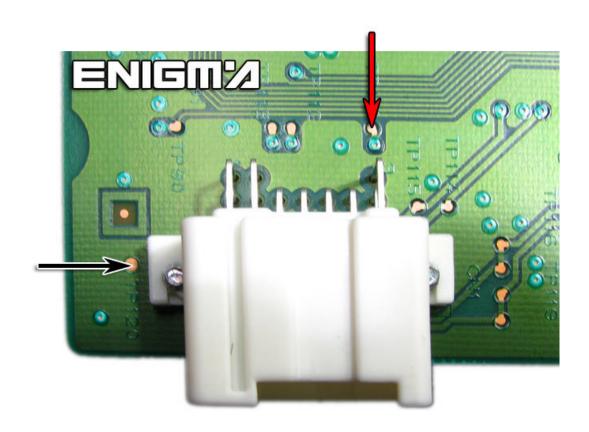



## VERSION 1:

