


VOLVO S70-V70 HC08



USE C12 CABLE, REMOVE DASH FROM CAR, NEXT CAREFULLY OPEN DASH. AFTER OPEN IT, REMOVE METAL COVER OVER MOTOROLA MCU FROM INSIDE. NOW WE HAVE MAIN BOARD FREE, LOOK FOR U7 CHIP AND LIFT UP PIN NR7, THEN SOLDER WHITE AND GREEN CABLE AS ON PHOTO SHOWN BELOW:

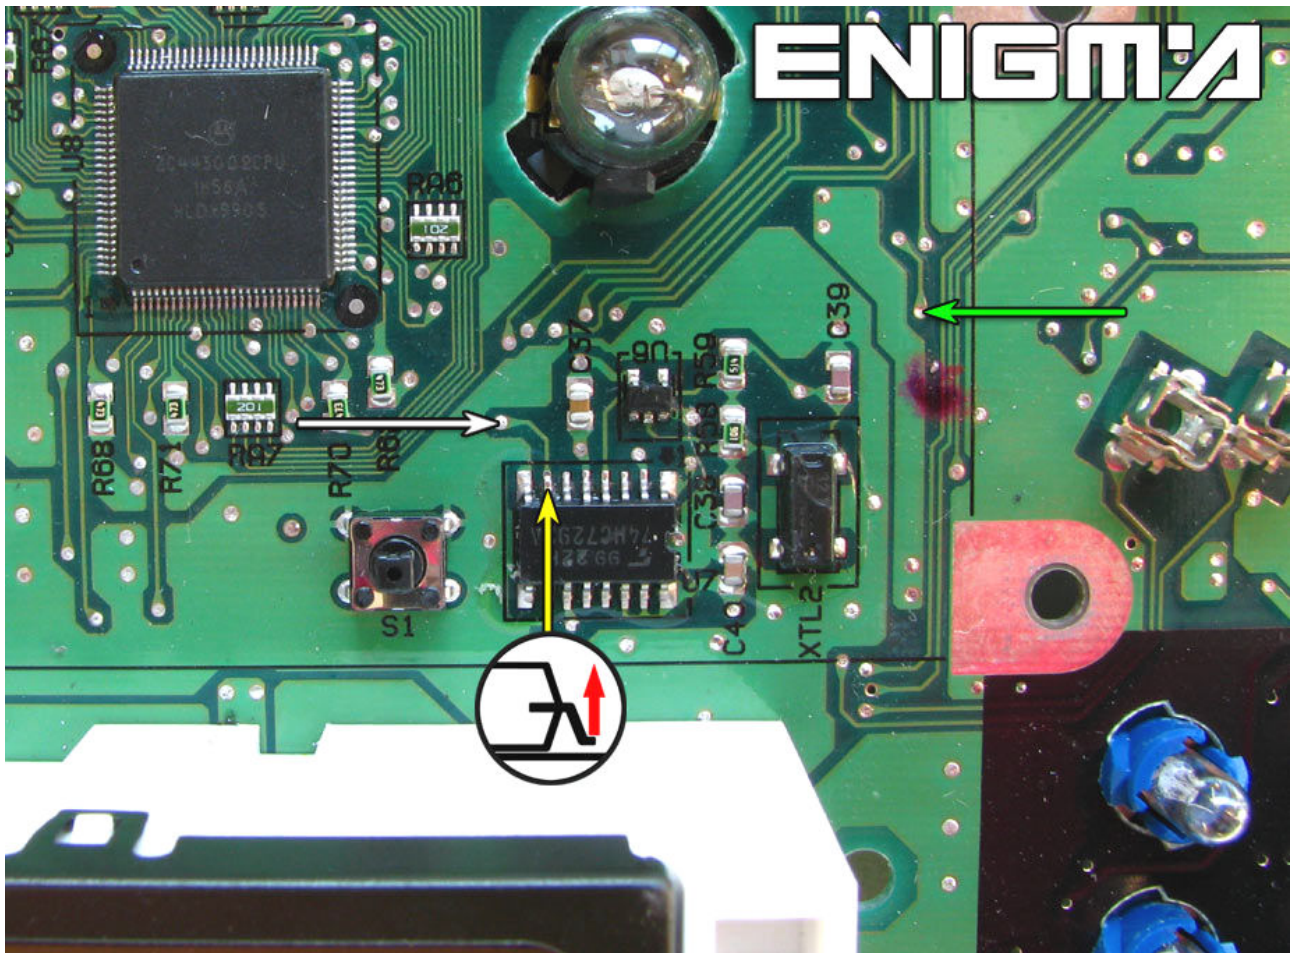

THEN CONNECT GROUND AND POSITIVE CABLE (BLACK AND RED) LIKE WE CAN SEE ON NEXT PHOTO AND MAKE BRIDGE BETWEEN ELEMENT L6 AND TRANSISTOR TR1 (SHOWN BY ORANGE LINE ON SECOND PHOTO). AFTER SOLDERING CONNECT CABLE C12 TO ENIGMA AND IN MENU SELECT VOLVO V70 HC08.

