
VW CRAFTER EZS 9s12

USE CABLE C45 + A6 ADAPTER. REMOVE MODULE FROM CAR CAREFULLY AND OPEN IT.



Now remove back plastic cover from EZS, and locate points on the board checking photos belows and solder cable leads as it shows to us: Version 1:

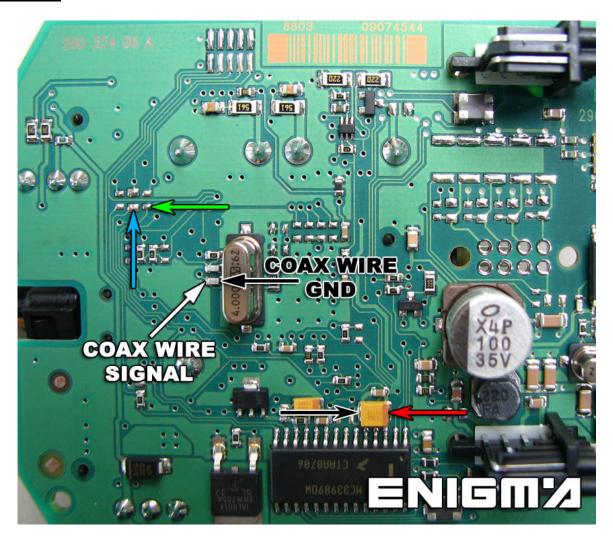

VERSION 2:

