


# ALFA ROMEO 145 HC05

USE CABLE C11, TAKE OFF BACK SIDE FROM DASH, THEN REMOVE MAIN BOARD, JUST PULL OFF IT. FIRST WE MUST SOLDER VIOLET LEAD AND POWER SUPPLY:

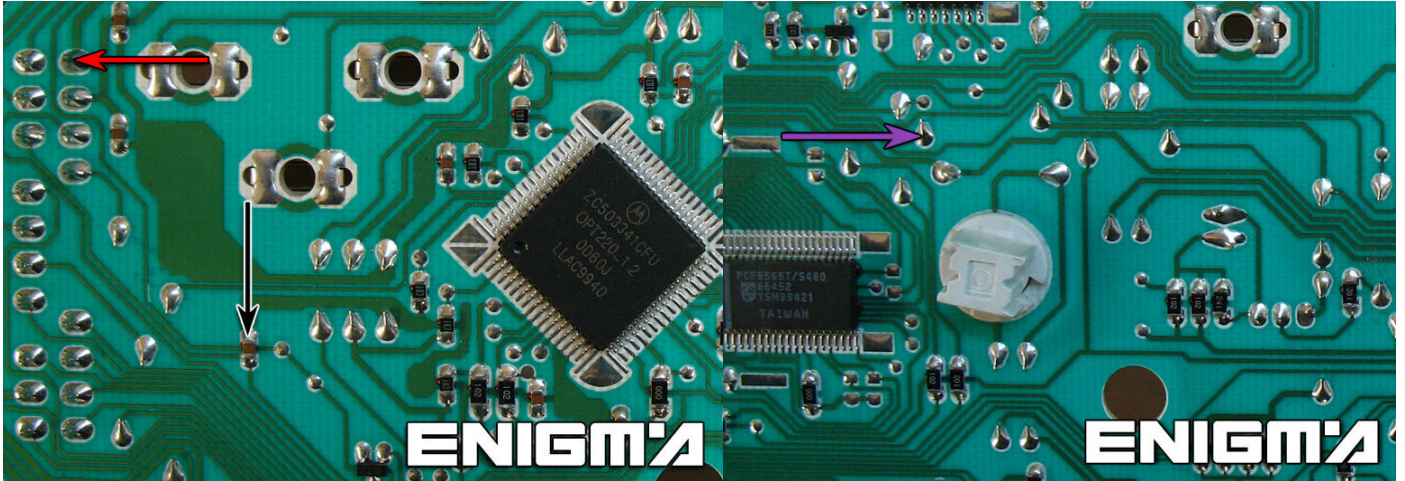

AND FINALLY SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN OF BELOW PHOTO (REMEMBER TO LIFT UP ONE PIN 21 FROM MICROCONTROLLER):

