


# BMW 7 SERIES E38 DASH SW14-15



USE C7 CABLE, WE ONLY NEED REMOVE BACK COVER FROM DASH, LOCATE POINTS IN THE MAIN BOARD LIKE IN PHOTO BELOW AND SOLDER CABLE LEADS AS IT SHOWS TO US. **NEVER** TOUCH NAILS, IT IS VERY DANGEROUS. MEMORY INSIDE THESE KINDS OF CARS IS A M35080.

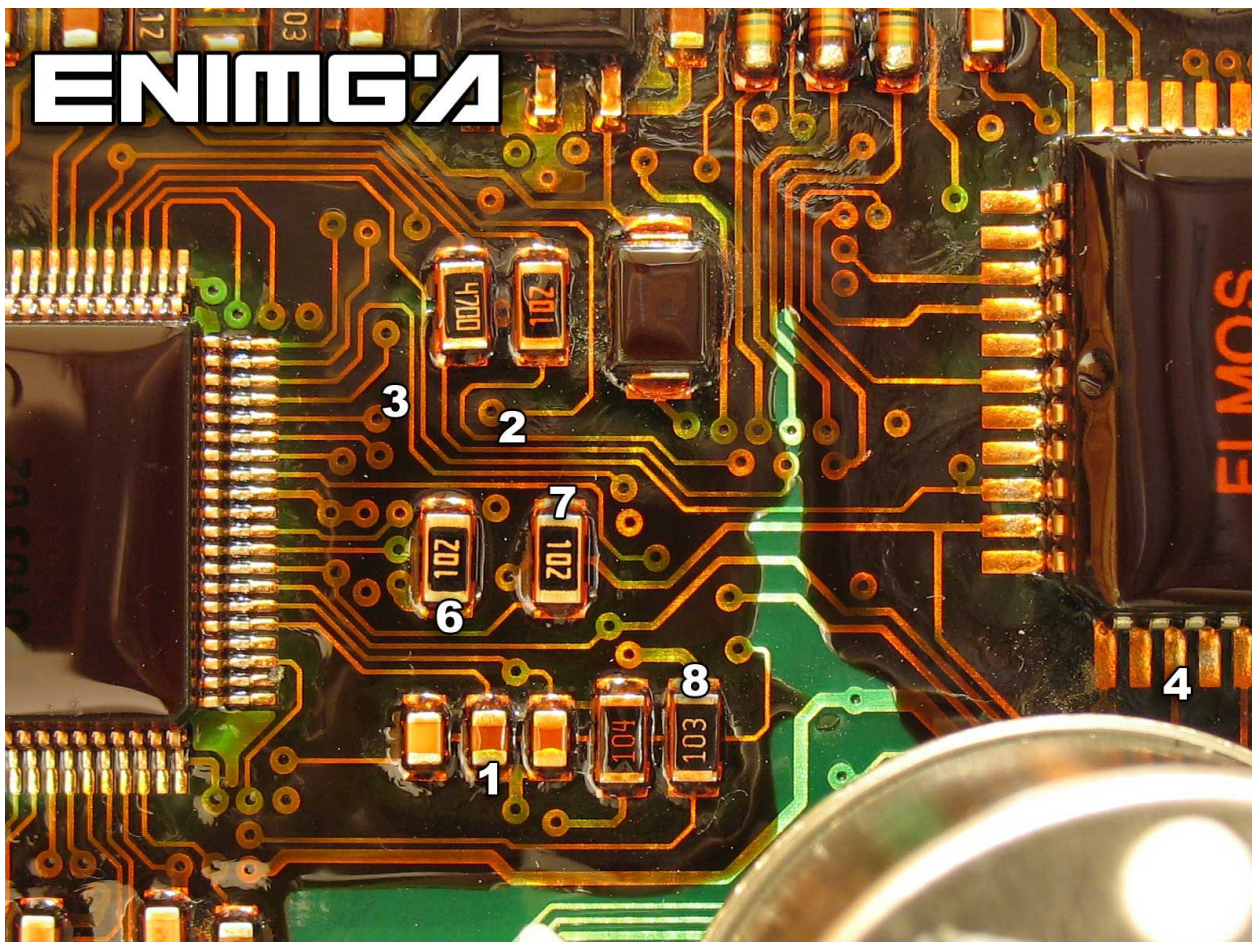

TO MAKE A GOOD JOB REMEMBER TO **MODIFY LCM AND EWS**