


# BMW EWS 3.X MASK 0D46J

USE SPECIFIC CABLE C18.  
TAKE OFF FROM CAR WHITE BOX  
LIKE ON THE PHOTO:



OPEN BOX **CHECK MASK** AND CONNECT CABLE PLUG LIKE SHOW ON NEXT PHOTO:

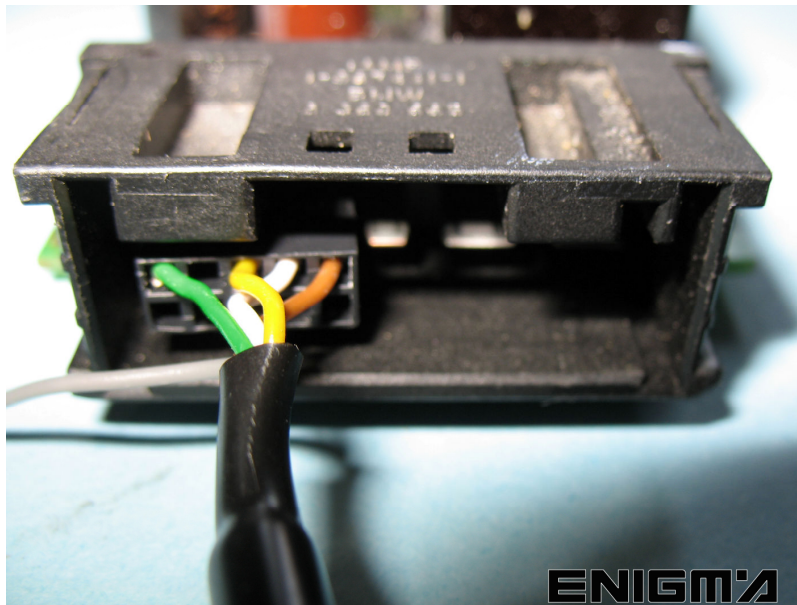

THEN CONNECT PIN FREE TO POINT ON THE MAIN BOARD AS SHOWN OF BELOW PHOTO:

