
BMW K12005

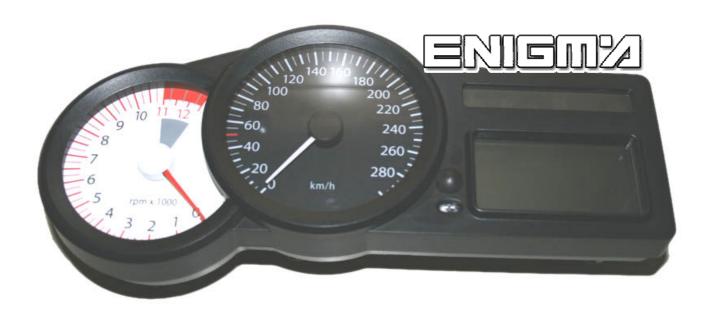

USE CABLE C4, OPEN DASH COMPLETELY AND LOCATE EEPROM M35080 MEMORY. NEXT CLIP IT CHECKING PIN 1:

