


BMW R 1200 GS



OPEN DASH COMPLETELY,
CAREFULLY REMOVE SCREEN.
CHECK THE PHOTO:

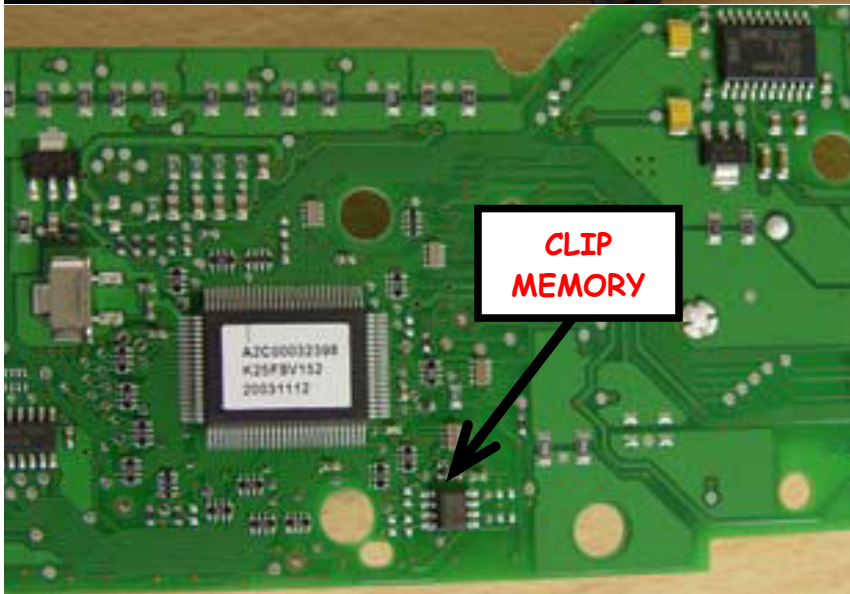

USE CABLE C4, LOCATE
EEPROM M35080, AND CLIP
IT CHECKING **PIN 1**, LIKE
IN THE PHOTO: