


# BMW X3 LCM DIRECT



LOCATION

USE CABLE C12, REMOVE MODULE FROM CAR, OPEN COMPLETELY IT, WHEN WE HAVE BOARD ON OUR HANDS, FIRST CONNECT POWER LEADS:

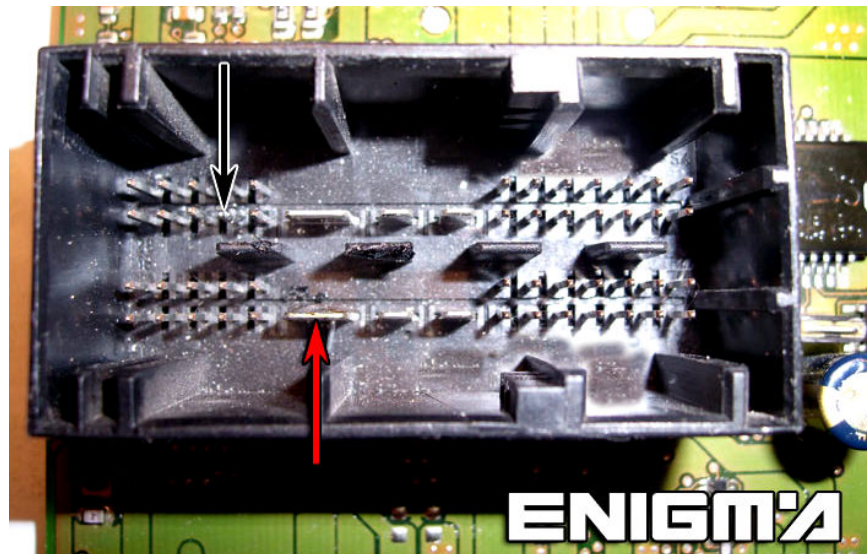

AND THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO POINTS SHOWN INTO PHOTO:

