


# BMW X5 SERIES E53 DASH SW13



USE C7 CABLE, WE ONLY NEED REMOVE BACK COVER FROM DASH, LOCATE POINTS IN THE MAIN BOARD LIKE IN PHOTO BELOW AND SOLDER CABLE LEADS AS IT SHOWS TO US. **NEVER** TOUCH NAILS, IT IS VERY DANGEROUS.

MEMORY INSIDE THESE KINDS OF CARS IS A 93CS56.

**OLD VALUE CAN'T BE READED!!! BUT AFTER PROGRAM ALL IS OK.**

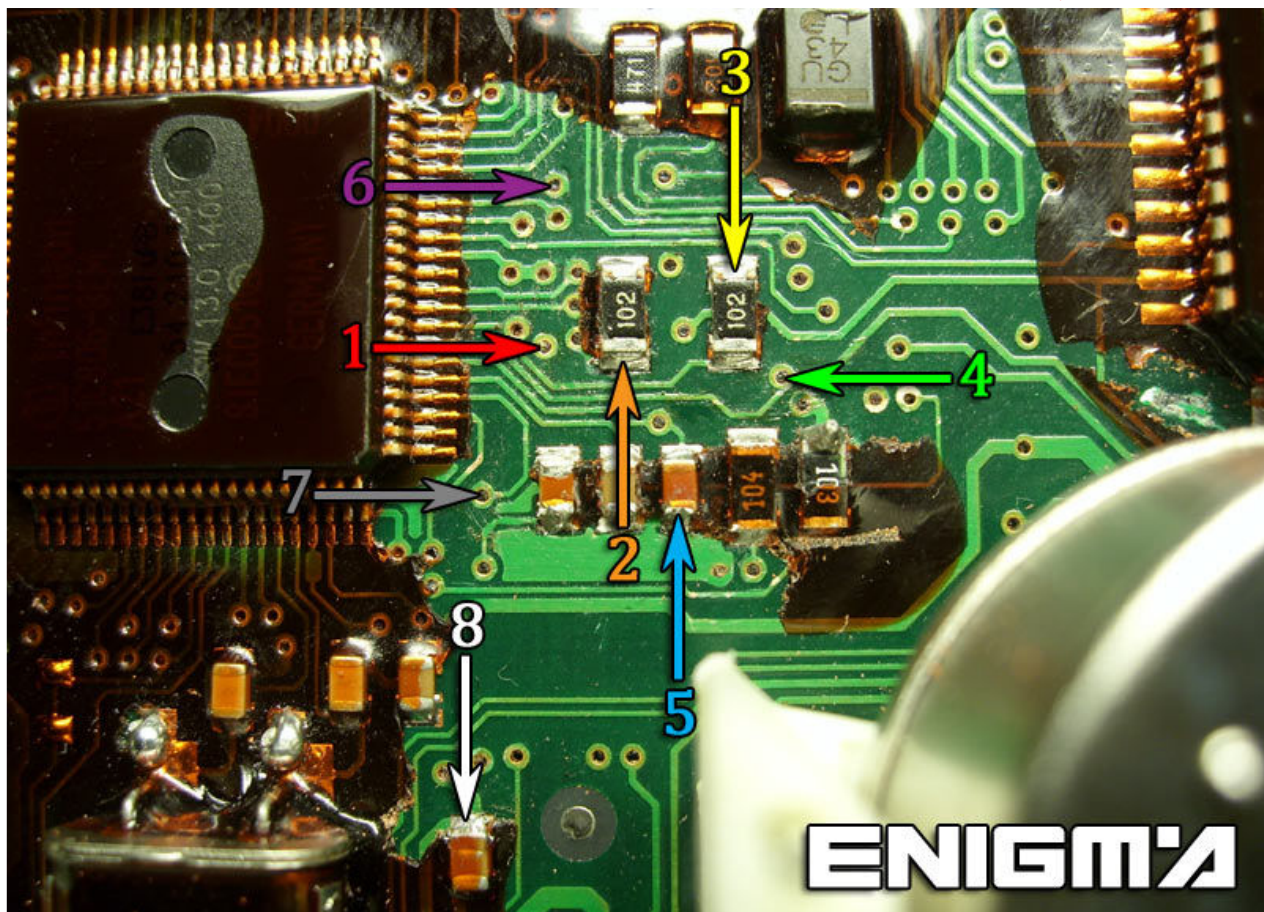

**TO MAKE A GOOD JOB REMEMBER TO MODIFY LCM AND EWS**