


CHEVROLET TACUMA

USE CABLE C11, REMOVE ALL PLASTICS AND TAKE OFF CAREFULLY NAILS, THEN MORE PLASTICS TILL WE HAVE CLEAN THE BOARD. IN THIS FIRST PHOTO WE CAN SEE HOW TO CONECT POWER FROM DASH, AND PIN THAT MUST BE **LIFT UP**:

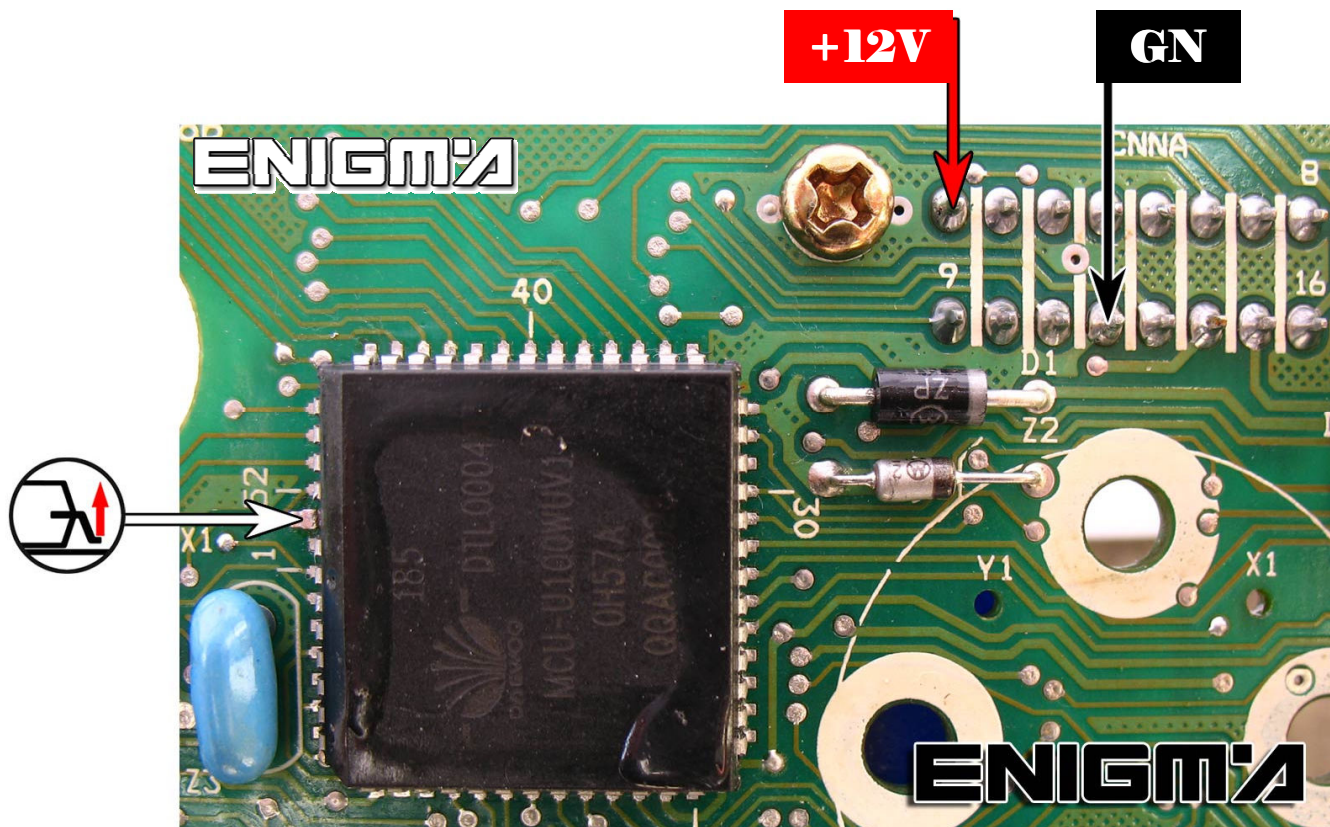

ON NEXT ONE, WE CAN SEE HOW TO SOLDER CABLE LEADS ACCORDING TO COLOURS:

