


CHRYSLER PT-CRUISER 2006

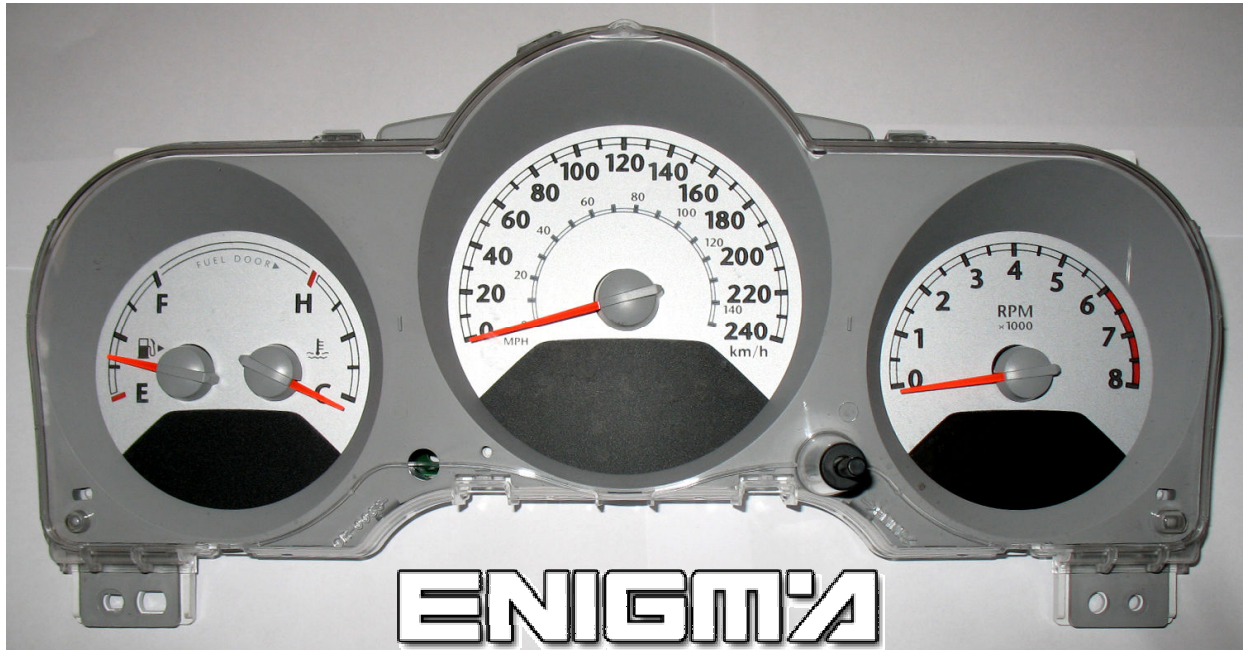

USE CABLE C4, OPEN BACK PART OF DASH, CAREFULLY, THEN LOCATE MEMORY, A RL76 EPROM, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

